



DOCUMENTATION ISG-kernel

Functional description Axis compensations

Short Description:
FCT-C5

© Copyright
ISG Industrielle Steuerungstechnik GmbH
STEP, Gropiusplatz 10
D-70563 Stuttgart
All rights reserved
www.isg-stuttgart.de
support@isg-stuttgart.de

Documentation version: 1.51
07/11/2024

Preface

Legal information

This documentation was produced with utmost care. The products and scope of functions described are under continuous development. We reserve the right to revise and amend the documentation at any time and without prior notice.

No claims may be made for products which have already been delivered if such claims are based on the specifications, figures and descriptions contained in this documentation.

Personnel qualifications

This description is solely intended for skilled technicians who were trained in control, automation and drive systems and who are familiar with the applicable standards, the relevant documentation and the machining application.

It is absolutely vital to refer to this documentation, the instructions below and the explanations to carry out installation and commissioning work. Skilled technicians are under the obligation to use the documentation duly published for every installation and commissioning operation.

Skilled technicians must ensure that the application or use of the products described fulfil all safety requirements including all applicable laws, regulations, provisions and standards.

Further information

Links below (DE)

<https://www.isg-stuttgart.de/produkte/softwareprodukte/isg-kernel/dokumente-und-downloads>

or (EN)

<https://www.isg-stuttgart.de/en/products/softwareproducts/isg-kernel/documents-and-downloads>

contains further information on messages generated in the NC kernel, online help, PLC libraries, tools, etc. in addition to the current documentation.

Disclaimer

It is forbidden to make any changes to the software configuration which are not contained in the options described in this documentation.

Trade marks and patents

The name ISG®, ISG kernel®, ISG virtuos®, ISG dirigent® and the associated logos are registered and licensed trade marks of ISG Industrielle Steuerungstechnik GmbH.

The use of other trade marks or logos contained in this documentation by third parties may result in a violation of the rights of the respective trade mark owners.

Copyright

© ISG Industrielle Steuerungstechnik GmbH, Stuttgart, Germany.

No parts of this document may be reproduced, transmitted or exploited in any form without prior consent. Non-compliance may result in liability for damages. All rights reserved with regard to the registration of patents, utility models or industrial designs.

General and safety instructions

Icons used and their meanings

This documentation uses the following icons next to the safety instruction and the associated text. Please read the (safety) instructions carefully and comply with them at all times.

Icons in explanatory text

- Indicates an action.
- ⇒ Indicates an action statement.



DANGER

Acute danger to life!

If you fail to comply with the safety instruction next to this icon, there is immediate danger to human life and health.



CAUTION

Personal injury and damage to machines!

If you fail to comply with the safety instruction next to this icon, it may result in personal injury or damage to machines.



Attention

Restriction or error

This icon describes restrictions or warns of errors.



Notice

Tips and other notes

This icon indicates information to assist in general understanding or to provide additional information.



Example

General example

Example that clarifies the text.



Programming Example

NC programming example

Programming example (complete NC program or program sequence) of the described function or NC command.



Release Note

Specific version information

Optional or restricted function. The availability of this function depends on the configuration and the scope of the version.

Table of contents

| | |
|-----------------------------------------------------------------|-----------|
| Preface | 2 |
| General and safety instructions | 3 |
| 1 Overview | 7 |
| 2 Backlash compensation | 8 |
| 2.1 Overview | 8 |
| 2.2 Description | 9 |
| 2.3 Parameterisation | 11 |
| 2.3.1 Overview | 11 |
| 2.3.2 Description | 11 |
| 2.3.3 CNC objects..... | 12 |
| 2.4 Error messages..... | 13 |
| 2.5 Parameterisation example | 13 |
| 3 Temperature compensation | 14 |
| 3.1 Overview | 14 |
| 3.2 Parameterisation | 16 |
| 3.2.1 Overview | 20 |
| 3.2.2 Description | 20 |
| 3.2.3 CNC objects..... | 23 |
| 3.3 Example | 25 |
| 4 Axis compensations with compensation value lists | 27 |
| 4.1 Compensation value lists | 27 |
| 4.2 Cross compensation | 30 |
| 4.2.1 Parameter | 32 |
| 4.2.1.1 Overview | 32 |
| 4.2.1.2 Description | 34 |
| 4.2.1.3 CNC objects..... | 38 |
| 4.2.2 Example of a compensation value list..... | 39 |
| 4.2.3 Error messages..... | 40 |
| 4.3 Plane compensation..... | 41 |
| 4.3.1 Parameter | 44 |
| 4.3.1.1 Overview | 44 |
| 4.3.1.2 Description | 47 |
| 4.3.1.3 CNC objects..... | 53 |
| 4.3.2 Examples of compensation value lists | 55 |
| 4.3.3 Error messages..... | 57 |
| 4.4 Leadscrew error compensation | 58 |
| 4.4.1 Parameter | 60 |
| 4.4.1.1 Overview | 60 |
| 4.4.1.2 Description | 63 |
| 4.4.1.3 CNC objects..... | 69 |
| 4.4.2 Example - Non-equidistant bilateral SSK..... | 71 |
| 4.4.3 Error messages..... | 72 |
| 4.5 Friction compensation | 73 |

| | | |
|-----------|---------------------------------------------------------------------------|------------|
| 4.5.1 | Types of friction and compensation | 73 |
| 4.5.1.1 | Additive current dependent on velocity | 76 |
| 4.5.1.1.1 | Reverse the motion direction | 77 |
| 4.5.1.2 | Parameterisation | 79 |
| 4.5.1.3 | Select and deselect compensation | 81 |
| 4.5.1.3.1 | Programming | 82 |
| 4.5.1.4 | Special features of drive parameters | 83 |
| 4.5.2 | Determine the parameters for the compensation value list..... | 83 |
| 4.5.2.1 | Determine parameters manually | 83 |
| 4.5.3 | Effect of friction compensation | 84 |
| 4.5.4 | Parameter | 84 |
| 4.5.4.1 | Overview | 84 |
| 4.5.4.1.1 | Axis parameters | 84 |
| 4.5.4.1.2 | Compensation values | 85 |
| 4.5.4.2 | Description | 86 |
| 4.5.4.2.1 | Axis parameters | 86 |
| 4.5.4.2.2 | Compensation values | 86 |
| 4.6 | Crosstalk compensation | 90 |
| 4.6.1 | Overview | 93 |
| 4.6.2 | Parameter | 96 |
| 4.6.2.1 | Overview | 96 |
| 4.6.2.2 | Description | 97 |
| 4.6.2.3 | CNC objects | 103 |
| 4.6.3 | Example of a compensation value list..... | 104 |
| 4.6.4 | Error messages..... | 106 |
| 5 | Other configuration options for axis compensation | 107 |
| 5.1 | Selecting/deselecting axis compensation in the NC program | 107 |
| 5.2 | Checking the states of axis compensation in the NC program | 108 |
| 5.3 | Monitoring of effectiveness of axis compensations in automatic mode | 111 |
| 6 | Appendix | 113 |
| 6.1 | Suggestions, corrections and the latest documentation..... | 113 |
| | Keyword index | 114 |

List of figures

| | | |
|----------|-----------------------------------------------------------------------------------------------------------------------------------|----|
| Fig. 1: | Positive backlash | 9 |
| Fig. 2: | Negative backlash | 10 |
| Fig. 3: | Temperature-dependent falsification of the axis position | 14 |
| Fig. 4: | Parameter of temperature compensation for a temperature T | 15 |
| Fig. 5: | Reference measurement at different temperatures | 16 |
| Fig. 6: | Access to CNC objects of temperature compensation | 18 |
| Fig. 7: | Deactivating compensation values with a \sin^2 filter over 20 cycles by deactivating temperature compensation temporarily | 19 |
| Fig. 8: | Logged compensation values dependent on axis position. | 26 |
| Fig. 9: | Application example for cross compensation (Y: Master, Z: Slave). | 30 |
| Fig. 10: | Schematic of the compensation value calculation for plane compensation | 41 |
| Fig. 11: | Specify compensation values at the interpolation points | 42 |
| Fig. 12: | Linear interpolation between the 4 interpolation points of a square | 43 |
| Fig. 13: | Compensation value list parameters | 47 |
| Fig. 14: | Compensation table with equidistant interpolation point grid and unilateral compensation | 59 |
| Fig. 15: | Theoretical friction curve | 74 |
| Fig. 16: | Measured friction curve | 75 |
| Fig. 17: | Principle of friction compensation | 76 |
| Fig. 18: | Add friction compensation to the control loop of an axis | 77 |
| Fig. 19: | Weight friction model before/after zero crossing, on reversal from negative to positive velocity | 78 |
| Fig. 20: | Add friction compensation to the control loop of an axis | 78 |
| Fig. 21: | Constant velocity (green) and associated current (black) | 83 |
| Fig. 22: | Circular transition test with and without friction compensation | 84 |
| Fig. 23: | Overview of crosstalk compensation | 91 |
| Fig. 24: | Crosstalk compensation – Mode 1 | 94 |
| Fig. 25: | Crosstalk compensation – Mode 2 | 94 |
| Fig. 26: | Crosstalk compensation – Mode 3 | 94 |

1 Overview

Task

Axis compensations rectify inaccuracies in tool guidance caused by mechanical errors such as backlash, errors in spindle pitch or temperature fluctuations.

A distinction is made between 7 programming modes:

- Backlash compensation
- Temperature compensation
- Cross compensation
- Plane compensation
- Leadscrew error compensation
- Friction compensation
- Crosstalk compensation

Characteristics

In general, each axis compensation can be:

- activated for all axis types, and
- used with all drive types

The conditions required for their effectiveness are described in the related sections on compensation types.

Parameterisation

Specific parameters must be configured for each axis compensation in order to activate them. They are described for each compensation type in the section "Parameterisation".

Programming

Axis compensations can be activated and deactivated in the NC program with the command X[COMP...].

Mandatory note on references to other documents

For the sake of clarity, links to other documents and parameters are abbreviated, e.g. [PROG] for the Programming Manual or P-AXIS-00001 for an axis parameter.

For technical reasons, these links only function in the Online Help (HTML5, CHM) but not in pdf files since pdfs do not support cross-linking.

The friction compensation functionality is described in FCT-C25.

2 Backlash compensation

2.1 Overview

Task

Backlash compensation has the purpose of compensating for the deviation between the real and calculated actual position of an axis caused by mechanical backlash.

Effectiveness

Backlash compensation can be activated for **all** axis types.

The effect of backlash can be compensated for **all** drive types.

Parameterisation

With regard to backlash compensation,

- the type of mechanical backlash P-AXIS-00021
 - the amount of mechanical backlash P-AXIS-00103
 - the distribution of mechanical backlash P-AXIS-00243
- can be parameterised in the axis parameter record [AXIS].

2.2 Description

Mechanical backlash

The play between the

- the drive and a moving machine part or
- between a sensor and a moving machine part is referred to as mechanical backlash.

For a moving machine part, mechanical backlash results in a deviation between the commanded position and the actual position. This especially has an effect when the direction of motion is reversed.

A distinction is made between the following kinds of mechanical backlash:

- Positive backlash
- Negative backlash

Positive backlash

Positive backlash occurs in systems in which

- the measuring system is connected directly to the drive and
- the backlash occurs between the drive and the moving mechanical part.

When the direction of movement reverses, the measuring system will detect a position change although the machine part is not yet moving due to the backlash.

This leads to a situation in which the machine part does not reach the commanded position, but travels too short by the backlash amount because the sensor that indirectly measures the position of the machine part is **ahead** of the machine part's **actual position**.

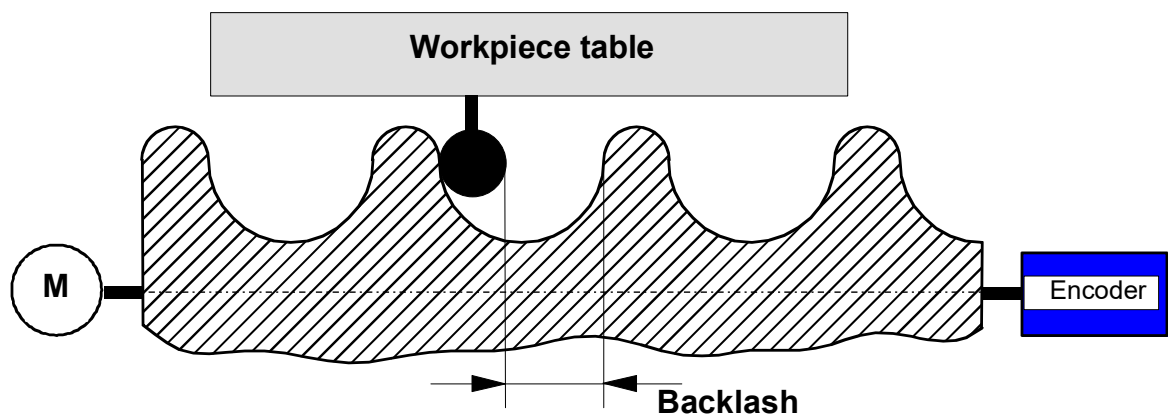


Fig. 1: Positive backlash

Negative backlash

Negative backlash is encountered in systems in which the backlash occurs between the moving machine part and the measuring system. When the direction is reversed, the machine part directly moves in the new direction without the measuring system detecting a position change. In this case, the machine part moves further by the backlash amount than is required by the command because the sensor that directly measures the position of the machine part **lags behind** the position of the machine part.

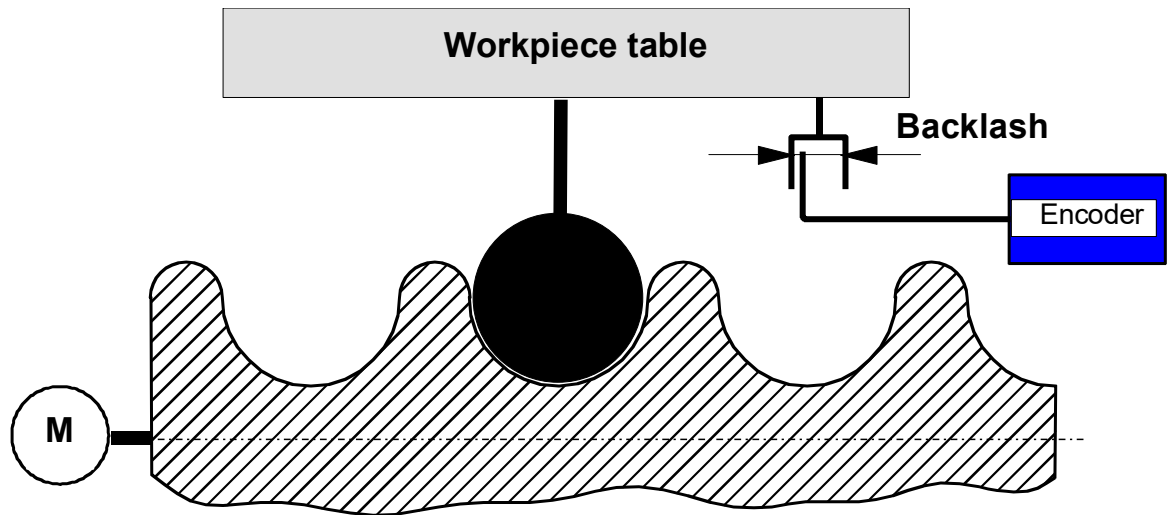


Fig. 2: Negative backlash

Backlash compensation

The size of the backlash P-AXIS-00103 during on position control is taken into consideration depending on the type of mechanical backlash P-AXIS-00021 and acts on the calculation of the command variables.



Notice

The display of the absolute command position or actual position of the moving machine part does **not** include the compensation values and therefore represents the position of an ideal machine.

Effectiveness

When backlash compensation is selected, it is active directly after controller start-up, regardless of whether homing has taken place [FCT-M1//Description].

The algorithm compensates for the backlash in the 1st cycle of the path motion. A large backlash can cause strong excitation in the machine. To prevent this, the backlash can be distributed over several position control cycles P-AXIS-00243.

2.3 Parameterisation

2.3.1 Overview

| ID | Parameter | Description |
|--------------|-----------------|-------------------------------------------|
| P-AXIS-00021 | anwahl_losekomp | Selection and type of mechanical backlash |
| P-AXIS-00103 | lose | Size of mechanical backlash |
| P-AXIS-00243 | n_backlash_cyc | Distribution of mechanical backlash |

2.3.2 Description

| P-AXIS-00021 | Selection of backlash compensation | |
|---------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------|
| Description | The selection of backlash compensation is done using this parameter. The type of backlash (the backlash between the table and the drive or the backlash between the drive and the measuring system) depends on the mathematical sign of P-AXIS-00103 (getriebe[i].lose). | |
| Parameter | lr_param.anwahl_losekomp | |
| Data type | UNS16 | |
| Data range | 0: No backlash compensation 1: Last axis motion occurred in pos. direction. 2: Last axis motion occurred in neg. direction. | |
| Axis types | T, R, S | |
| Dimension | T: ---- | R,S: ---- |
| Default value | 0 | |
| drive types. | ---- | |
| Remarks | | |

| P-AXIS-00103 | Size of backlash | |
|---------------|----------------------------------------------------------|---------------|
| Description | The parameter defines the size of backlash. | |
| Parameter | getriebe[i].lose | |
| Data type | SGN16 | |
| Data range | SGN16 range 0 < backlash: backlash betw. drive and slide | |
| Axis types | T, R, S | |
| Dimension | T: 0.1µm | R,S: 0.0001 ° |
| Default value | 0 | |
| drive types. | ---- | |
| Remarks | | |

2.3.3 CNC objects

| | | | |
|--------------------|--------------------------------------------------------------|---------------------|--------------------------|
| Name | BC::actual backlash | | |
| Description | Backlash compensation: current effective compensation offset | | |
| Task | GEO (Port 551) | | |
| Index group | 0x120300 | Index offset | 0x<A _{ID} >0093 |
| Data type | SGN32 | Length | 4 |
| Attributes | read | Unit | [-] |
| Remarks | | | |

| | | | |
|--------------------|------------------------------------------------------------------------------------------|---------------------|--------------------------|
| Name | BC::conf. backlash | | |
| Description | Backlash compensation: Size of backlash This value is defined in P-AXIS-00103 [► 11]. | | |
| Task | GEO (Port 551) | | |
| Index group | 0x120300 | Index offset | 0x<A _{ID} >00AF |
| Data type | SGN32 | Length | 4 |
| Attributes | read | Unit | [Incr.] |
| Remarks | | | |

| | | | |
|--------------------|----------------------------------------------------------------------|---------------------|--------------------------|
| Name | BC::delta backlash | | |
| Description | Backlash compensation: Change in compensation value in current cycle | | |
| Task | GEO (Port 551) | | |
| Index group | 0x120300 | Index offset | 0x<A _{ID} >0095 |
| Data type | SGN32 | Length | 4 |
| Attributes | read | Unit | [-] |
| Remarks | | | |

| | | | |
|--------------------|----------------------------------------------------------------------------------|---------------------|--------------------------|
| Name | BC::sum backlash | | |
| Description | Backlash compensation: Compensation value at the current position without filter | | |
| Task | GEO (Port 551) | | |
| Index group | 0x120300 | Index offset | 0x<A _{ID} >0094 |
| Data type | SGN32 | Length | 4 |
| Attributes | read | Unit | [-] |
| Remarks | | | |

2.4 Error messages

Errors in the configuration of batch compensation result in deactivation of the function for the axis affected and an error message (warning) is output:

P-ERR-110392

2.5 Parameterisation example



Example

Excerpt from the axis parameter list

```
getriebe[0].lose          1000 #0,1 µm backlash
lr_param.anwahl_losekomp  1    #Positive direction
lr_param.n_backlash_cyc  10    #Number of filter cycles
```

3 Temperature compensation

3.1 Overview

Deformation and its effect

Temperature changes cause an expansion or contraction of machine parts.

Deformations cause offsets in the axis positions that are not detected by the machine's position measuring system and lead to inaccuracies in the finished workpiece.

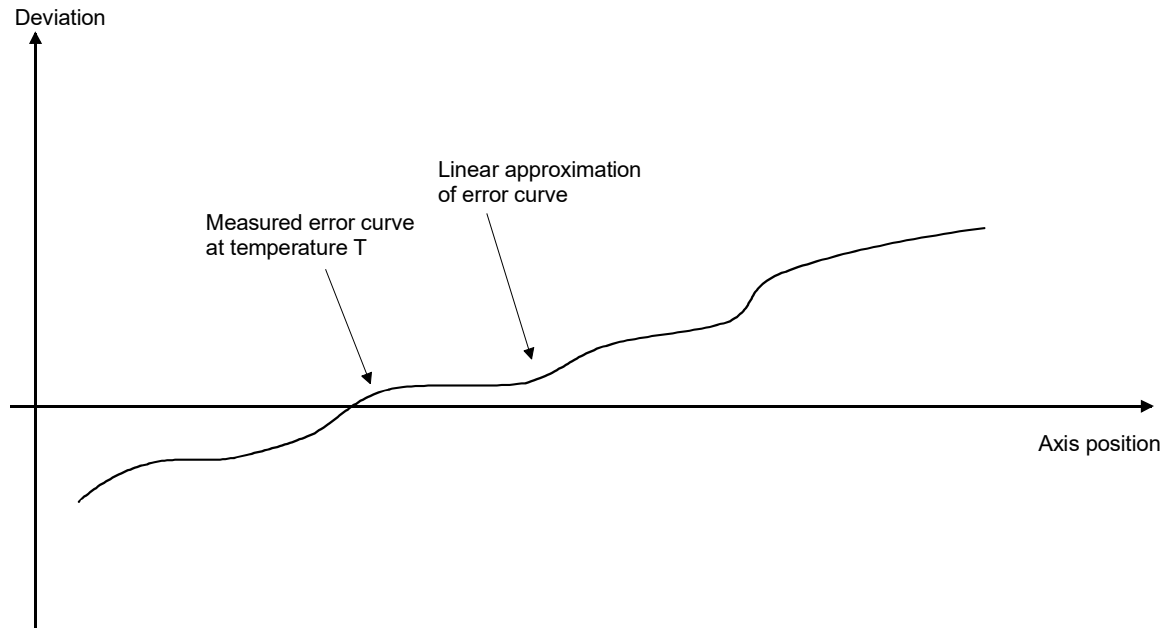


Fig. 3: Temperature-dependent falsification of the axis position

Compensation

Temperature compensation provides a function to correct the command variable of the axis depending on the current temperature and axis position.

The compensation values are determined according to the following equation:

$$\Delta s(T,s) = \text{offset}_0(T) + \text{coefficient}(T) * [s-s_0]$$

where:

s = current position of the axis

T = current reference temperature

S_0 = reference position of the axis

$\text{Offset}_0(T)$ = temperature-dependent deviation from reference position

Coefficient = temperature-dependent ratio of deviation to distance from reference position

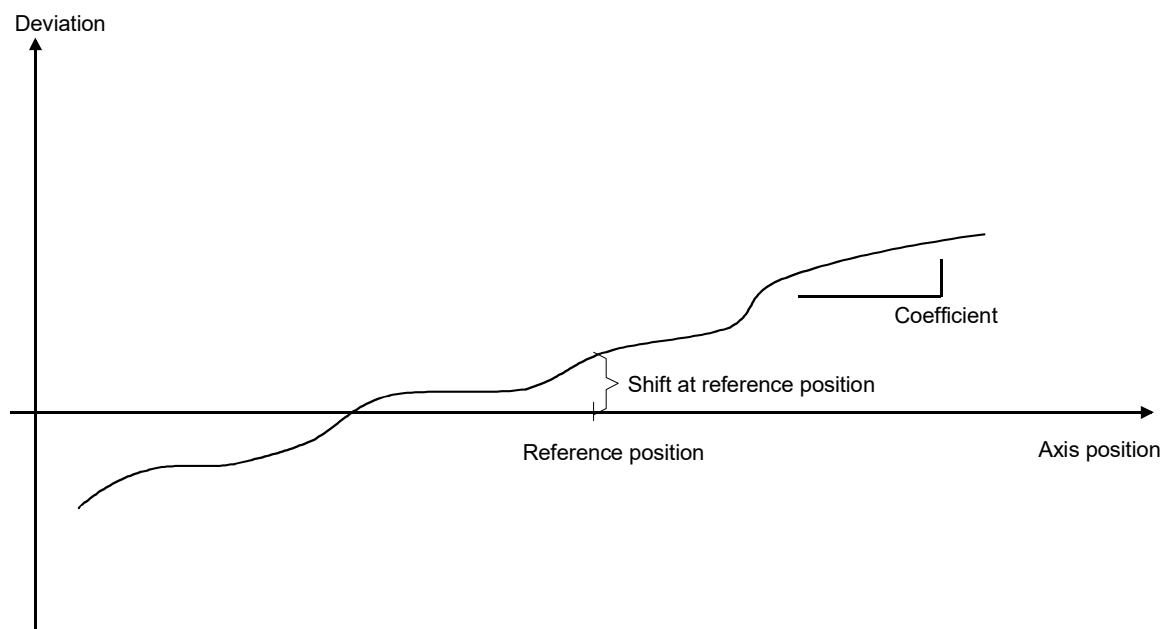


Fig. 4: Parameter of temperature compensation for a temperature T

Effectiveness

The temperature compensation is effective if:

- it was activated for the axis and
- the axis is homed.

3.2 Parameterisation

Activate

Temperature compensation is activated in the axis machine data record [AXIS] of the required axis using P-AXIS-00271:

```

kopf.achs_nr           1
#
# temperature compensation on/off
lr_param.temp_comp     1
    
```

Compensation can also be activated using a write access to the CNC object via the GEO task:

```

TEMPC::is_active      Index group = 0x120300, Index offset = 0x10041
    
```

Reference measurement

Before specifying the parameters of temperature compensation, a reference measurement must first be carried out using an external position measuring system. It determines the deviations of the axis positions between the internal and external measuring system at different temperatures.

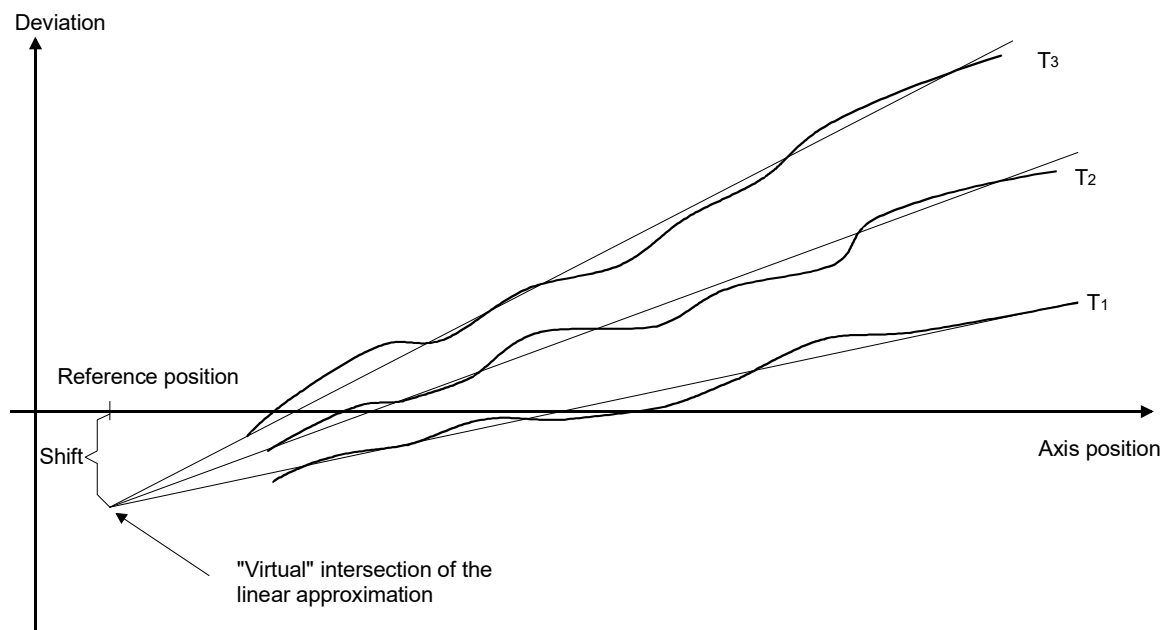


Fig. 5: Reference measurement at different temperatures

Determine parameters

The parameters reference position, offset and coefficient can be taken from the measurement curves. The values at a given temperature can be set later from the curves. Temperatures that are not measured can be interpolated or extrapolated from the measured temperature curves.

If the virtual intersection of the approximated linear curves is chosen as the reference position, the offset is independent of temperature. In this case, only the coefficient must be reset for different temperatures.

Influence of temperature

The individual parameters can be set by the PLC depending on the current temperature. To do this, a corresponding temperature signal (sensor) is transmitted to the PLC which then derives the parameters from it.

Explicit activation in NC program

```
lr_param.temp_comp_manual_activation      0
```

- 0 (default): The CNC activates temperature compensation automatically as soon as the required preconditions are met (e.g. the axis is homed).
- 1: Temperature compensation must be activated manually in the NC program using the COMP command (see Section "Selecting and deselecting axis compensations in the NC program [▶ 107]").

Compensation is deselected:


- at the end of the NC program
- at CNC reset and
- on release of the axis.

Change parameters

Each of the parameters can be changed by downloading the axis list:

```
kopf.achs_nr      1
#
# temperature compensation on/off
lr_param.temp_comp      1
# reference position
lr_param.temp_comp_position_0      100 [0.1µm]
# reference offset
lr_param.temp_comp_offset_0      40 [0.1µm]
lr_param.temp_comp_coefficient      4000 [µm/m]
#
```

In addition to the download option, there is also the option of writing and reading the parameters via direct access to the GEO task via CNC objects. For example, the first axis can be addressed via the following index group and index offset:

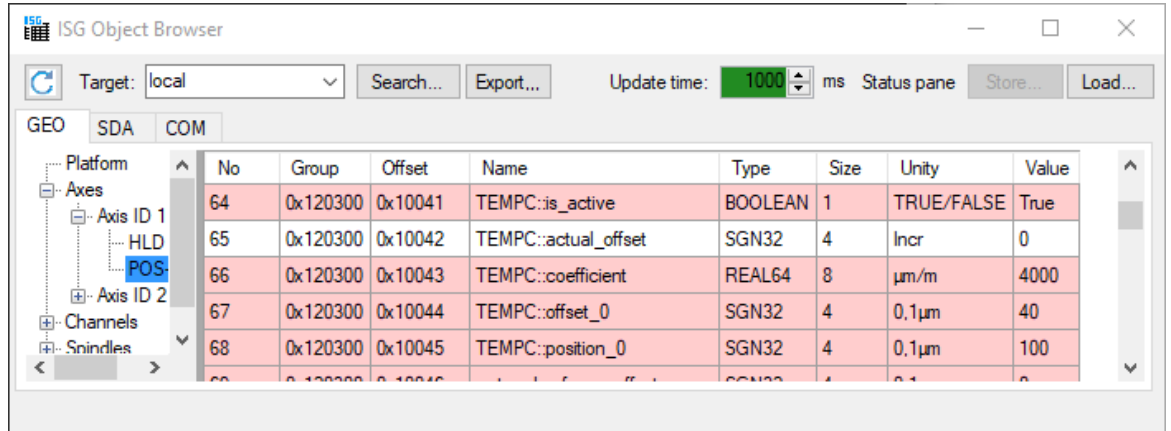

| No | Group | Offset | Name | Type | Size | Unity | Value |
|----|----------|---------|----------------------|---------|------|------------|-------|
| 64 | 0x120300 | 0x10041 | TEMPC::is_active | BOOLEAN | 1 | TRUE/FALSE | True |
| 65 | 0x120300 | 0x10042 | TEMPC::actual_offset | SGN32 | 4 | Incr | 0 |
| 66 | 0x120300 | 0x10043 | TEMPC::coefficient | REAL64 | 8 | µm/m | 4000 |
| 67 | 0x120300 | 0x10044 | TEMPC::offset_0 | SGN32 | 4 | 0,1µm | 40 |
| 68 | 0x120300 | 0x10045 | TEMPC::position_0 | SGN32 | 4 | 0,1µm | 100 |

Fig. 6: Access to CNC objects of temperature compensation

Monitoring and coupling/decoupling

The compensation values are recalculated for each interpolation cycle. If the change per cycle exceeds the given maximum axis acceleration, this change can be output filtered over multiple cycles.

For this the number of cycles of the \sin^2 filter can be defined in the axis parameter list. By default, this is set to one cycle.

```

kopf.achs_nr          1
#
# Cycle of the sin2 filter
lr_param.temp_comp_n_cycles 20
  
```

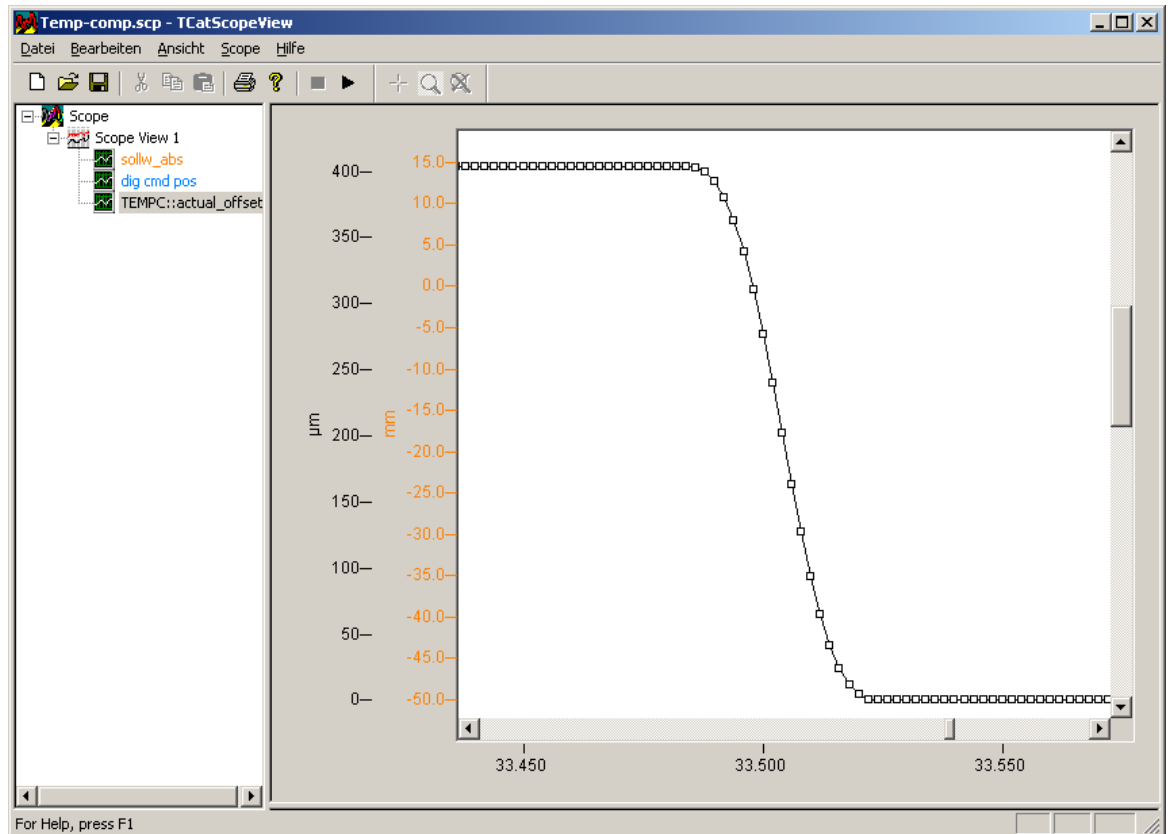


Fig. 7: Deactivating compensation values with a sin² filter over 20 cycles by deactivating temperature compensation temporarily

Display the compensation

In addition to the download option, there is also the option of writing and reading the parameters via direct access to the CNC objects of the GEO task. For example, the 1st axis can be addressed using the following index group and index offset:

| | |
|------------------|------------------------------------------------|
| TEMPC::is_active | Index group = 0x120300, Index offset = 0x10041 |
| TEMPC::is_active | Index group = 0x120300, Index offset = 0x10042 |

Display the axis position

When temperature compensation is activated, the normal command and actual positions of the axis are displayed unchanged.

The corrections are only calculated and included before output to the drive bus and can therefore be viewed in the position values of the drive bus (dig_cmd_pos, dig_act_pos).

3.2.1 Overview

| ID | Parameter | Description |
|--------------|--------------------|---------------------------------|
| P-AXIS-00789 | lr_param.crosstalk | Activate crosstalk compensation |

| ID | Parameter | Description |
|--------------|--------------------------------|-----------------------------------------|
| P-COMP-00063 | kw.crosstalk.master_ax_nr | Log. Axis number of the master axis |
| P-COMP-00064 | kw.crosstalk.n_cycles | Number of cycles for 'smooth switching' |
| P-COMP-00065 | kw.crosstalk.last_index | Last index of compensation value table |
| P-COMP-00066 | kw.crosstalk.acceleration | Accelerations of the master axis |
| P-COMP-00067 | kw.crosstalk.correction | Compensation values for the slave axis |
| P-COMP-00073 | kw.crosstalk.manual_activation | Manual activation |

3.2.2 Description

| P-AXIS-00271 | Selection of temperature compensation | |
|---------------|-----------------------------------------------------|-----------|
| Description | The parameter selects the temperature compensation. | |
| Parameter | lr_param.temp_comp | |
| Data type | BOOLEAN | |
| Data range | 0/1 | |
| Axis types | T, R, S | |
| Dimension | T: ---- | R,S: ---- |
| Default value | 0 | |
| Drive types | ---- | |
| Remarks | | |

| P-AXIS-00272 | Parameterisation of temperature compensation (Basic position) | |
|---------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------|
| Description | The compensation values are approximated by a linear straight line. This straight line is defined by a basic position, an offset at this position and a geometrical pitch. Depending on the temperature, these parameters can be adjusted e.g. by the PLC. | |
| Parameter | lr_param.temp_comp_position_0 | |
| Data type | SGN32 | |
| Data range | MIN(SGN32) < temp_comp_position_0 < MAX(SGN32) | |
| Axis types | T, R, S | |
| Dimension | T: 0.1 µm | R,S: 0.0001° |
| Default value | 0 | |
| Drive types | ---- | |
| Remarks | | |

| P-AXIS-00273 | Parameterisation of temperature compensation (Offset) | |
|---------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------|
| Description | The compensation values are approximated by a linear straight line. This straight line is defined by a basic position, an offset at this position and a geometrical pitch. Depending on the temperature, these parameters can be adjusted e.g. by the PLC. | |
| Parameter | lr_param.temp_comp_offset_0 | |
| Data type | SGN32 | |
| Data range | MIN(SGN32) < temp_comp_offset_0 < MAX(SGN32) | |
| Axis types | T, R, S | |
| Dimension | T: 0.1 µm | R,S: 0.0001° |
| Default value | 0 | |
| Drive types | ---- | |
| Remarks | | |

| P-AXIS-00274 | Parameterisation of temperature compensation (Geometrical pitch) | |
|---------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------|
| Description | The compensation values are approximated by a straight line. This straight line is defined by a basic position, an offset at this position and a geometrical pitch. Depending on the temperature these parameters can be adjusted e.g. by the PLC. | |
| Parameter | lr_param.temp_comp_coefficient | |
| Data type | REAL64 | |
| Data range | -10000 ≤ temp_comp_coefficient ≤ 10000 | |
| Axis types | T, R, S | |
| Dimension | T: µm/m | R,S: ---- |
| Default value | 0 | |
| Drive types | ---- | |
| Remarks | | |

| P-AXIS-00275 | Distribution of the temperature compensation on several cycles | |
|---------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------|
| Description | <p>The compensation values are recalculated for each interpolation cycle. If the change per cycle exceeds the given maximum axis acceleration, this change can be output filtered over multiple cycles.</p> <p>For this the number of cycles of the \sin^2 filter can be defined in the axis parameter list.</p> | |
| Parameter | lr_param.temp_comp_n_cycles | |
| Data type | UNS16 | |
| Data range | 0 < temp_comp_n_cycles < 20 | |
| Axis types | T, R, S | |
| Dimension | T: Number of interpolation cycles | R,S: Number of interpolation cycles |
| Default value | 0 | |
| Drive types | ---- | |
| Remarks | | |

| P-AXIS-00482 | Manual activation of the temperature compensation | |
|---------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------|
| Description | <p>The CNC turns the temperature compensation on when it is selected in the axis parameter list (P-AXIS-00271) and the required preconditions are met (e.g. the axis is homed).</p> <p>If the parameter is set to 1, the temperature compensation must be manually turned on in the NC program via an NC command (see [PROG//Switching axis compensation on/off in the NC program]). In addition, the compensation is turned off at the end of the NC program, during CNC reset and axis release.</p> | |
| Parameter | lr_param.temp_comp_manual_activation | |
| Data type | BOOLEAN | |
| Data range | 0: Automatic activation (default). 1: Manual activation in NC program. | |
| Axis types | T, R, S | |
| Dimension | T: ---- | R,S: ---- |
| Default value | 0 | |
| Drive types | ---- | |
| Remarks | | |

3.2.3 CNC objects

| | | | |
|--------------------|----------------------------------------------------------------------|---------------------|--------------------------|
| Name | TEMPC:: activated | | |
| Description | Temperature compensation: active, activate using P-AXIS-00271 [► 20] | | |
| Task | GEO (Port 551) | | |
| Index group | 0x120300 | Index offset | 0x<A _{ID} >0041 |
| Data type | BOOLEAN | Length | 1 |
| Attributes | read/ write | Unit | [-] |
| Remarks | TRUE/FALSE | | |

| | | | |
|--------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------|--------------------------|
| Name | TEMPC::f_is_active | | |
| Description | <p>This object reads whether temperature compensation is activated .</p> <p>This means that all preconditions, such as axis is referenced and all necessary enables are on, must be fulfilled.</p> | | |
| Task | GEO (Port 551) | | |
| Index group | 0x120300 | Index offset | 0x<A _{ID} >01D8 |
| Data type | BOOLEAN | Length | 1 |
| Attributes | read | Unit | [-] |
| Remarks | | | |

| | | | |
|--------------------|------------------------------------------------------|---------------------|--------------------------|
| Name | TEMPC::actual_offset | | |
| Description | Temperature compensation: current compensation value | | |
| Task | GEO (Port 551) | | |
| Index group | 0x120300 | Index offset | 0x<A _{ID} >0042 |
| Data type | SGN32 | Length | 4 |
| Attributes | read | Unit | [Incr.] |
| Remarks | | | |

| | | | |
|--------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------|--------------------------|
| Name | TEMPC::coefficient | | |
| Description | Temperature compensation: current coefficient See also P-AXIS-00274 [▶ 21] The temperature compensation values are approximated by a straight line. The straight line is defined by a basic position, an offset at this position and a geometrical pitch. | | |
| Task | GEO (Port 551) | | |
| Index group | 0x120300 | Index offset | 0x<A _{ID} >0043 |
| Data type | REAL64 | Length | 8 |
| Attributes | read/ write | Unit | [µm/m] |
| Remarks | | | |

| | | | |
|--------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------|--------------------------|
| Name | TEMPC::offset_0 | | |
| Description | Temperature compensation: Start offset characteristic See also P-AXIS-00273 [▶ 21] The temperature compensation values are approximated by a straight line. The straight line is defined by a basic position, an offset at this position and a geometrical pitch. | | |
| Task | GEO (Port 551) | | |
| Index group | 0x120300 | Index offset | 0x<A _{ID} >0044 |
| Data type | SGN32 | Length | 4 |
| Attributes | read/ write | Unit | [0.1 µm] |
| Remarks | | | |

| | | | |
|--------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------|--------------------------|
| Name | TEMPC::position_0 | | |
| Description | Temperature compensation: Start position characteristic See also P-AXIS-00272 [▶ 21] The temperature compensation values are approximated by a straight line. The straight line is defined by a basic position, an offset at this position and a geometrical pitch. | | |
| Task | GEO (Port 551) | | |
| Index group | 0x120300 | Index offset | 0x<A _{ID} >0045 |
| Data type | SGN32 | Length | 4 |
| Attributes | read/ write | Unit | [0.1 µm] |
| Remarks | | | |

3.3 Example

Initialisation

Compensation is activated in the X axis by the following settings:

```
lr_param.temp_comp           1
lr_param.temp_comp_position_0 100 [0.1µm]
lr_param.temp_comp_offset_0  40 [0.1µm]
lr_param.temp_comp_coefficient 4000 [µm/m]
lr_param.temp_comp_n_cycles   20
```



Programming Example

NC program

The following NC program was used for the test:

```
N10: G90 G01 X0 F1000
G04 1
N10 X100
G04 1
N10 X80
G04 1
N10 X50
G04 1
N20 X-200
G04 1

$GOTO [N10]
M30
```

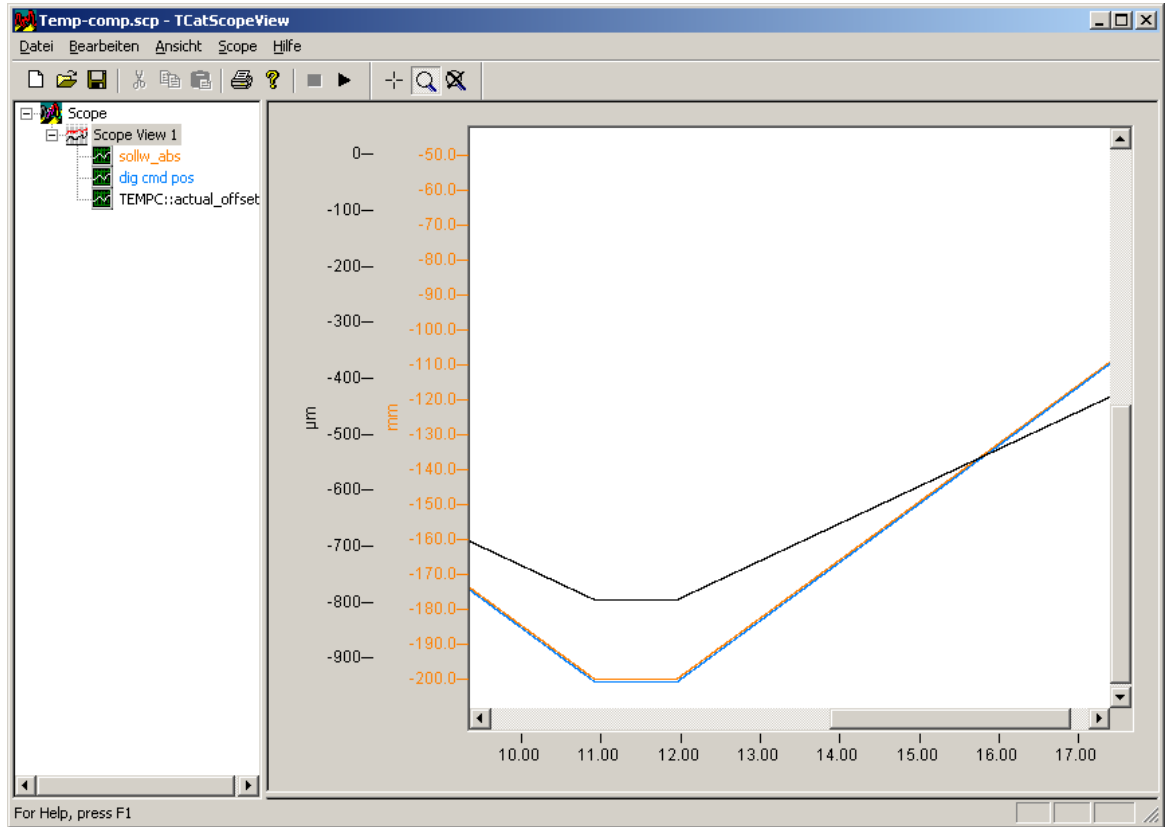


Fig. 8: Logged compensation values dependent on axis position.

4 Axis compensations with compensation value lists

4.1 Compensation value lists

Storing compensation values

Data for the compensation processes

- Cross compensation
- Plane compensation
- Leadscrew error compensation
- Friction compensation and
- crosstalk compensation

are stored for each axis in so-called compensation value lists that are loaded when the controller starts up. It is also possible to update the lists at a later date.



Notice

It is possible to activate all the compensation processes for an axis simultaneously. When you use leadscrew error compensation, it is recommended to include a possible backlash directly in the compensation table of the leadscrew error compensation (double-sided compensation P-COMP-00021).



Notice

As of CNC Build V3.1.3079.06 you can adjust the size of the compensation value lists.

Providing the compensation value lists

The following entries must be present in the start-up description [STUP] in order to signal the compensation table to the controller:

| Variable name | Type | Meaning |
|----------------------|--------|------------------------------------------------------------------------|
| zahl_kw | UNS16 | Number of offset value lists |
| achs_kw[i] | String | Name of datafile |
| achs_kw_log_ax_nr[i] | UNS16 | Logical number of axis for which the compensation value list is valid. |



Attention

If the compensation value list is configured by the TwinCAT System Manager, these entries are assigned automatically in the start-up description.



Programming Example

Excerpt from the start-up list *hochlauf.lis*:

```

:
zahl_kw                3
#
achs_kw_log_ax_nr[0]  1
achs_kw[0]             ..\listen\achskw1.lis
#
achs_kw_log_ax_nr[1]  2
achs_kw[1]             ..\listen\achskw2.lis
#
achs_kw_log_ax_nr[2]  6
achs_kw[2]             ..\listen\achskw6.lis
:
    
```

Structure of the compensation value list

The compensation value list consists of

- a list header containing general data and
- the body of the list where the compensation algorithms are configured and containing the actual compensation tables.

List header

The list header is identified in the list by the structure variable **kopf**. It contains the following elements:

| Variable name | Type | Meaning |
|--------------------|--------|--------------------------------------------------------------|
| kopf.achs_nr | UNS16 | Logical number of compensation value list |
| kopf.log_achs_name | String | Name of the axis, which is only used for diagnostic purposes |



Attention

If the compensation value list is configured by the TwinCAT System Manager, these entries are made automatically in the compensation value list.

Body of the list

The list body contains general data and the compensation tables. The entries in the list body are identified by the structure variable **kw** and **frict_comp**. It contains the following substructures for each of the compensation processes:

| Variable name | Meaning |
|---------------|--------------------------------------------------------------------------|
| kw.crosscomp. | Data structure for cross compensation |
| kw.crosscomp2 | Data structure for plane compensation (2-dimensional cross compensation) |
| kw.ssfk. | Data structure for leadscrew error compensation |
| kw.crosstalk. | Data structure for cross compensation |
| frict_comp | Data structure for friction compensation |

Updating the compensation table

The compensation table can be updated while the controller is running, provided the conditions for the effectiveness of a compensation are fulfilled.



Attention

After start-up, updating or re-initialisation, it is “almost” not permissible to command a rapid program start or exchange an axis without requesting axis positions. First, the NC channel must be synchronised in relation to axis positions.

4.2 Cross compensation

Cross compensation permits the compensation of rectangularity errors or errors that arise due to deflection of the axis.

Compensation process

Cross compensation (also called sag compensation) permits the compensation of an axis position depending on the command position of another axis.

The axis whose command positions influences the compensation value is called the master axis. The axis for which compensation is active is called the slave axis.

A master axis can also be the slave axis of another master axis.



Notice

Cross compensation data is specified in the compensation value list of the **slave axis**.

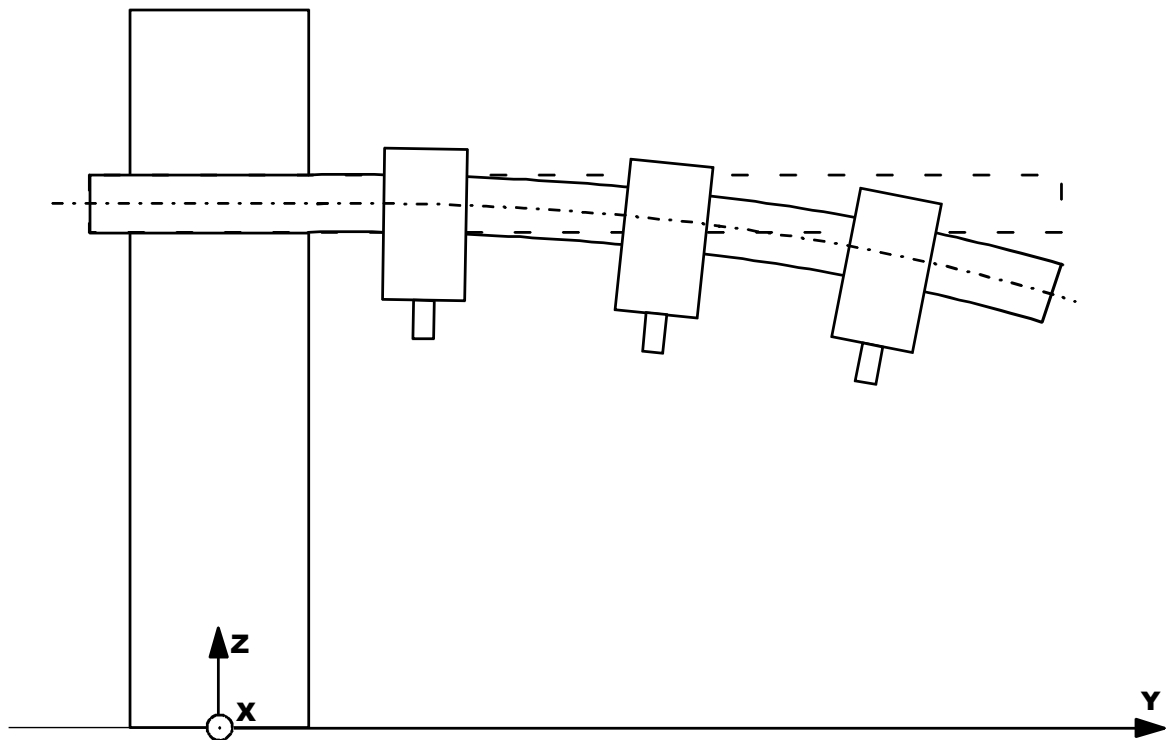


Fig. 9: Application example for cross compensation (Y: Master, Z: Slave).

Properties

- A master axis has one or several slave axes.
- A slave has only one master axis.
- Cross compensation can also be used for the master and slave axes of a gantry combination.
- A compensation value can be specified for each interpolation point.
- Interpolation between interpolation points is linear.
- Cross compensation is available for all drive types.
- Compensations can only be viewed in the positions directly output to the drive (not in the normal display data) since compensation takes place outside normal calculations.
- As of CNC Build V3.1.3079.06 you can adjust the size of the compensation table. The parameter P-COMP-00060 [▶ 34] defines the maximum number of table entries. The actual number of entries used by P-COMP-00004 [▶ 35]

Effectiveness

Cross compensation is only effective if all the following conditions are fulfilled:

- The function was activated for the slave axis.
- The compensation value table was provided.
- Master and slave axes are linear axes. As of CNC Build v263.1504, cross compensation can also be used for rotary axes or spindles.
- The master axis was referenced. Therefore there is no need to reference the slave axis.

4.2.1 Parameter

4.2.1.1 Overview

Activation

Cross compensation is activated in the axis machine data record of the slave axis by P-AXIS-00047:

| Variable name | Type | Meaning |
|--------------------|---------|----------------------------------------------------------|
| lr_param.crosscomp | BOOLEAN | 0: no cross compensation 1: Cross compensation active |



Programming Example

Excerpt from the axis parameter list:

```
:  
lr_param.crosscomp      1  
:
```



Notice

Cross compensation can also be used for a gantry axis group. A compensation value table must then be specified for each individual axis in the gantry combination (cross compensation slave).

Compensation value tables can therefore have different settings for each gantry axis.

Activating/deactivating

Cross compensation (ON if master axis is referenced and compensation is activated) can be switched on or off at any time when the slave axis is at standstill. The slave axis command positions displayed are offset with the offset values.

Filter:

When the master axis is referenced, inconsistencies may occur when compensation values are calculated for a moved slave axis. These inconsistencies can be smoothed by using a \sin^2 filter. The parameter P-COMP-00026 (n_cycles) switches the filter order to activate it.

Management data of the cross compensation table

General data of the list body is entered in the structure **kw.crosscomp.***. It contains the following elements.

Management data elements

| Variable name | Type | Meaning |
|-------------------|---------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| unit | BOOLEAN | Unit of the length entries: 0: Encoder increments 1: metric (in 0.1 µm) |
| last_index | SGN32 | Last valid index in the slave axis table. As of CNC Build V3.1.3079.06 the maximum possible of table entries can be defined in P-COMP-00060 [▶ 34]. In previous Builds the default value is 1000. The table always starts with index 0 |
| master_ax_nr | UNS16 | Axis number of the master axis; its command position acts as the input variable of the compensation table. |
| n_cycles | UNS16 | Number of cycles of sin ² filter. |
| manual_activation | BOOLEAN | 0: (Default) The CNC activates cross compensation automatically as soon as the required conditions are met (e.g. the master axis is referenced). 1: Cross compensation must be activated explicitly in the NC program by the COMP command (see section "Selecting/deselecting axis compensations in the NC program") [▶ 107]. Compensation is deactivated at the end of the NC program, when the CNC is reset or when the axis is released. |

Compensation values for cross compensation

The corresponding compensation value of the slave axis is entered in the table **kw.crosscomp.table[i].*** for every interpolation point. The compensation table is valid for positive and negative directions of motion.

Compensation value table

| Variable name | Type | Meaning |
|------------------------|-------|----------------------------------------------------------------------------------|
| table[i].setpoint | SGN32 | Interpolation point of master axis for which the slave axis must be compensated. |
| table[j][i].correction | SGN32 | Relative compensation value for the slave axis at interpolation point i |

Special feature for rotary master axis

As of CNC Build v263.1504, cross compensation can also be used for rotary axes or spindles. A modulo calculation of the axis position is carried out in the position controller for these axis types.

If a cross compensation master axis is a modulo axis, a "modulo transition" also takes place in the compensation table in the modulo transition of the axis position of this master axis. To prevent a jump from occurring at this point of the compensation value process of the slave axis, the same compensation value must be specified in the compensation table at the modulo transition.

4.2.1.2 Description

| | | |
|---------------------|--------------------------------------------------|--|
| P-AXIS-00047 | Activation of cross compensation | |
| Description | This parameter activates the cross compensation. | |
| Parameter | lr_param.crosscomp | |
| Data type | BOOLEAN | |
| Data range | 0/1 | |
| Axis types | T | |
| Dimension | T: ---- | |
| Default value | 0 | |
| Drive types | ---- | |
| Remarks | | |

| | | |
|---------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------|
| P-COMP-00060 | Maximum number of table entries for cross compensation | |
| Description | <p>This cross compensation parameter (FCT-C5 [► 30]) saves the memory space required for a particular number of table entries.</p> <p>The size of the actually used compensation table is defined by `last_index` (P-COMP-00004) and `last_index` must be smaller than `max_points`.</p> | |
| Parameter | kw.crosscomp.max_points | |
| Data type | UNS32 | |
| Data range | 0 <= P-COMP-00060 | |
| Axis types | T, R, S | |
| Dimension | T: ---- | R,S: ---- |
| Default value | 1001 | |
| Remarks | <p>The parameter value can no longer be changed after start-up or after lists are reloaded. Otherwise error ID 110639 is output.</p> <p>If P-COMP-00060 is not specified (or assigned the value 0), the default value is assigned to P-COMP-00060 for downward compatibility reasons.</p> <p>To avoid the default assignment, memory can be saved for an axis that does not use cross compensation [► 30] by assigning the value 1 to P-COMP-00060.</p> <p>This parameter is available as of CNC Build V3.3079.06</p> | |

| | | |
|---------------------|------------------------------------------------------------------------------------------|-----------|
| P-COMP-00003 | Unit of the length entries | |
| Description | The parameter defines the unit to be used for the length entries of compensation values. | |
| Parameter | kw.crosscomp.unit | |
| Data type | BOOLEAN | |
| Data range | 0: Encoder increments 1: Metric (in 0.1 µm) | |
| Axis types | T, R, S | |
| Dimension | T: ---- | R,S: ---- |
| Default value | 0 | |
| Remarks | | |

| | | |
|---------------------|----------------------------------------------------------------------------------------------------------------------|-----------|
| P-COMP-00004 | Last index of compensation value table | |
| Description | This parameter determines the last valid index in the table of the master axis. The table always starts with index 0 | |
| Parameter | kw.crosscomp.last_index | |
| Data type | SGN32 | |
| Data range | 0 ≤ last_index < P-COMP-00060 [▶ 34] | |
| Axis types | T, R, S | |
| Dimension | T: ---- | R,S: ---- |
| Default value | 0 | |
| Remarks | P-COMP-00060 [▶ 34] is available as of Build V3.1.3079.06. The upper limit in previous CNC versions is 1000. | |

| | | |
|---------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------|
| P-COMP-00005 | Logical axis number of the master axis | |
| Description | This parameter determines the logical number of the master axis whose command position is used to calculate the input variable of the compensation value table of the slave axis. | |
| Parameter | kw.crosscomp.master_ax_nr | |
| Data type | UNS16 | |
| Data range | 1 ≤ master_ax_nr ≤ MAX (UNS16) | |
| Axis types | T, R, S | |
| Dimension | T: ---- | R,S: ---- |
| Default value | 0 | |
| Remarks | | |

| P-COMP-00026 | Number of cycles for 'smooth switching' | |
|---------------------|--------------------------------------------------------------------------------------------------------------------------|-----------|
| Description | This parameter determines the number of cycles for which cross compensation is activated/deactivated smoothly. | |
| Parameter | kw.crosscomp.n_cycles | |
| Data type | UNS16 | |
| Data range | 0 ≤ n_cycles ≤ 20 (maximum number of cycles for which cross compensation is activated/deactivated, application-specific) | |
| Axis types | T, R, S | |
| Dimension | T: ---- | R,S: ---- |
| Default value | 0 | |
| Remarks | | |

| P-COMP-00029 | Manual activation | |
|---------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------|
| Description | <p>Cross compensation is automatically activated by the CNC if it selected in the axis parameters (P-AXIS-00047) and the required conditions are met (e.g. axis is homed).</p> <p>If the parameter is set to the value 1, cross compensation must be activated explicitly by an NC command (see [PROG//Selecting/deselecting axis compensations in the NC program]). In addition, compensation is deselected at the end of the NC program, at CNC reset and on axis release.</p> | |
| Parameter | kw.crosscomp.manual_activation | |
| Data type | BOOLEAN | |
| Data range | 0: Automatic activation 1: Manual activation in NC program | |
| Axis types | T, R, S | |
| Dimension | T: ---- | R,S: ---- |
| Default value | 0 | |
| Remarks | | |

| | | |
|---------------------|--------------------------------------------------------------------------------------------------------------------|----------------------------|
| P-COMP-00006 | Interpolation point of the master axis | |
| Description | This parameter determines the interpolation points of the master axis on which the slave axis has to be corrected. | |
| Parameter | kw.crosscomp.table[i].setpoint | |
| Data type | SGN32 | |
| Data range | MIN(SGN32) ≤ setpoint < MAX(SGN32) | |
| Axis types | T, R, S | |
| Dimension | T: 0.1 µm or increments | R,S: 0.0001° or increments |
| Default value | 0 | |
| Remarks | | |

| | | |
|---------------------|------------------------------------------------------------------------------------------------------------|----------------------------|
| P-COMP-00007 | Compensation values for the slave axis | |
| Description | This parameter determines the relative compensation values for the slave axis at interpolation points 'i'. | |
| Parameter | kw.crosscomp.table[i].correction | |
| Data type | SGN32 | |
| Data range | MIN(SGN32) ≤ correction < MAX(SGN32) | |
| Axis types | T, R, S | |
| Dimension | T: 0.1 µm or increments | R,S: 0.0001° or increments |
| Default value | 0 | |
| Remarks | | |

4.2.1.3 CNC objects

| | | | |
|--------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------|--------------------------|
| Name | CROSSC::f_is_active | | |
| Description | Cross compensation: active, activate using Description [▶ 34] This means that all preconditions must be met, such as the axis is homed and all necessary enables are on. | | |
| Task | GEO (Port 551) | | |
| Index group | 0x120300 | Index offset | 0x<A _{ID} >004F |
| Data type | BOOLEAN | Length | 1 |
| Attributes | read | Unit | [-] |
| Remarks | | | |

| | | | |
|--------------------|------------------------------------------------------------------------------------|---------------------|--------------------------|
| Name | CROSSC::activated | | |
| Description | This object reads whether cross compensation is activated via P-AXIS-00047 [▶ 34]. | | |
| Task | GEO (Port 551) | | |
| Index group | 0x120300 | Index offset | 0x<A _{ID} >01D6 |
| Data type | BOOLEAN | Length | 1 |
| Attributes | read | Unit | [-] |
| Remarks | | | |

| | | | |
|--------------------|----------------------------------------------|---------------------|--------------------------|
| Name | CROSSC::actual_offset | | |
| Description | Cross compensation: current effective offset | | |
| Task | GEO (Port 551) | | |
| Index group | 0x120300 | Index offset | 0x<A _{ID} >0035 |
| Data type | SGN32 | Length | 4 |
| Attributes | read | Unit | [Incr.] |
| Remarks | | | |

| | | | |
|--------------------|-----------------------------------------------------------------------------|---------------------|--------------------------|
| Name | CROSSC::delta_offset | | |
| Description | Cross compensation: change in compensation value compared to previous cycle | | |
| Task | GEO (Port 551) | | |
| Index group | 0x120300 | Index offset | 0x<A _{ID} >0034 |
| Data type | SGN32 | Length | 4 |
| Attributes | read | Unit | [Incr.] |
| Remarks | | | |

4.2.2 Example of a compensation value list



Programing Example

Example of a compensation value list for cross compensation

```
# *****  
# Axis compensation data for Z-axis  
# *****  
  
kopf.achs_nr                3  
kopf.log_achs_name          Z  
kw.crosscomp.last_index    99 /*Last valid index of the  
table*/  
kw.crosscomp.master_ax_nr  1 /*Log. ax. number of the master  
axis*/  
kw.crosscomp.unit          1 /*0:Incr. 1:Metric in 0.1 µm*/  
kw.crosscomp.n_cycles      20  
#  
kw.crosscomp.table[0].setpoint 10735  
kw.crosscomp.table[0].correction 3  
kw.crosscomp.table[1].setpoint 11523  
kw.crosscomp.table[1].correction 5  
:  
:  
kw.crosscomp.table[99].setpoint 10000000 /*at 1000 mm of axis 3*/  
kw.crosscomp.table[99].correction 1000 /*corr. of 0.1 mm for  
axis 1*/
```

4.2.3 Error messages

Errors in the configuration of the cross compensation result in deactivation of the function for the affected axis and to the output of an error message (warning message).

The following error messages then appear:

- ID 110639
- ID 70242
- ID 70244
- ID 70245
- ID 70246
- ID 70247
- ID 70248
- ID 70249
- ID 70250
- ID 70432

4.3 Plane compensation

With plane compensation, axis misalignments can be compensated for as a function of the position of two master axes. One application case, for example, is the compensation of the Z axis depending on X and Y.

Compensation process

Plane compensation allows the compensation of an axis position depending on the command positions of 2 axes.

The two axes whose command positions influence the compensation value are called master axes. The axis for which compensation is active is called the slave axis.

One of the master axes can also be a slave axis itself.



Notice

Cross compensation data is specified in the compensation value list of the **slave axis**.

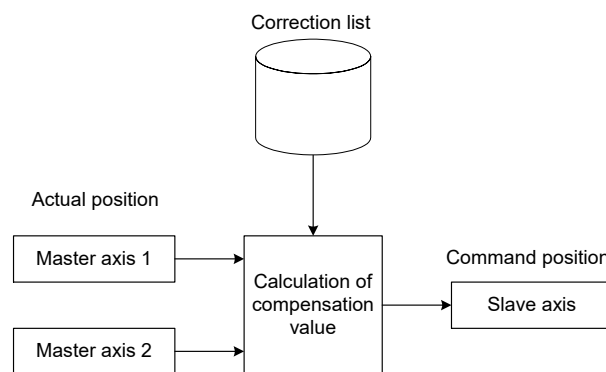


Fig. 10: Schematic of the compensation value calculation for plane compensation

Characteristics

- The two master axes form a 2-axis coordinate system; in the simplest case it is the X-Y plane (master axis 1 = X axis, master axis 2 = Y axis).
- This coordinate system is divided into squares or rectangles like a chessboard.
- The edge length of the squares or the edge lengths of the rectangles can be parameterised.
- The corners of the squares or rectangles form the interpolation points of the table (see figure below).
- A compensation value can be specified for each interpolation point.
- Interpolation between interpolation points is linear (see 2nd figure below).
- Outside the table, the compensation values at the edge of the table remain effective.
- As of CNC Build V3.1.3079.06 you can adjust the size of the compensation table. The maximum number of table entries can be set by P-COMP-00061 [▶ 48] and The actual number of entries used is specified by P-COMP-00010 [▶ 49] and P-COMP-00011 [▶ 50].

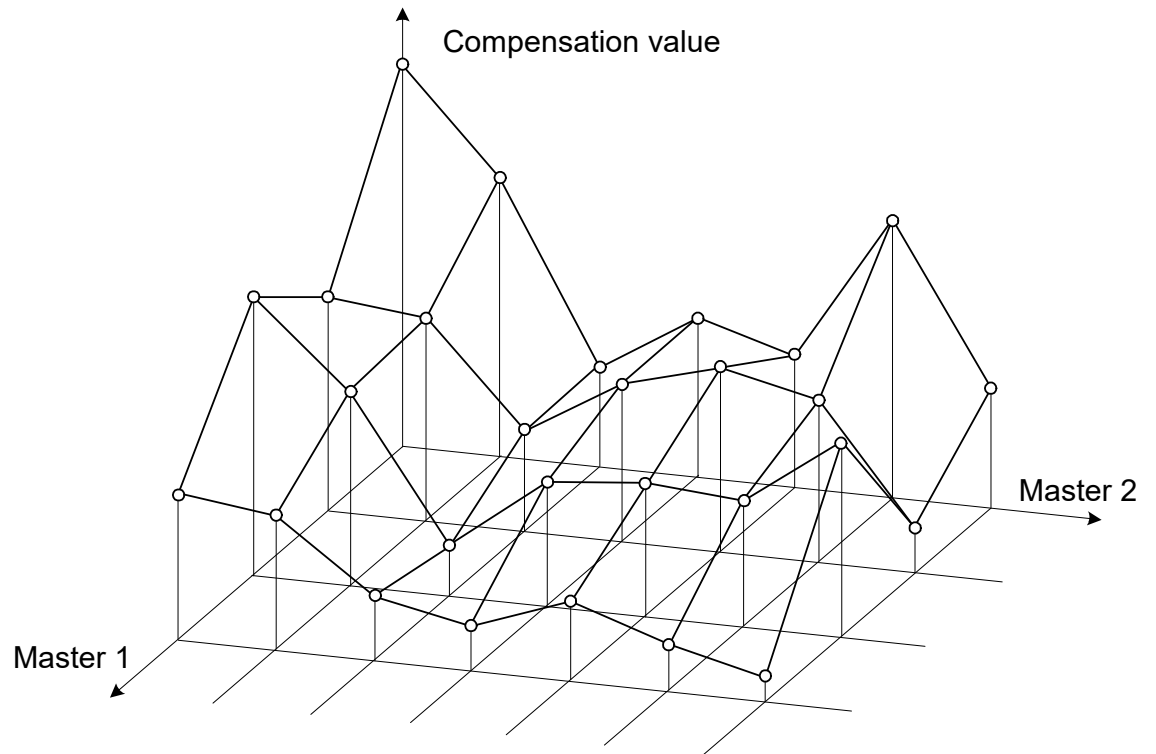


Fig. 11: Specify compensation values at the interpolation points

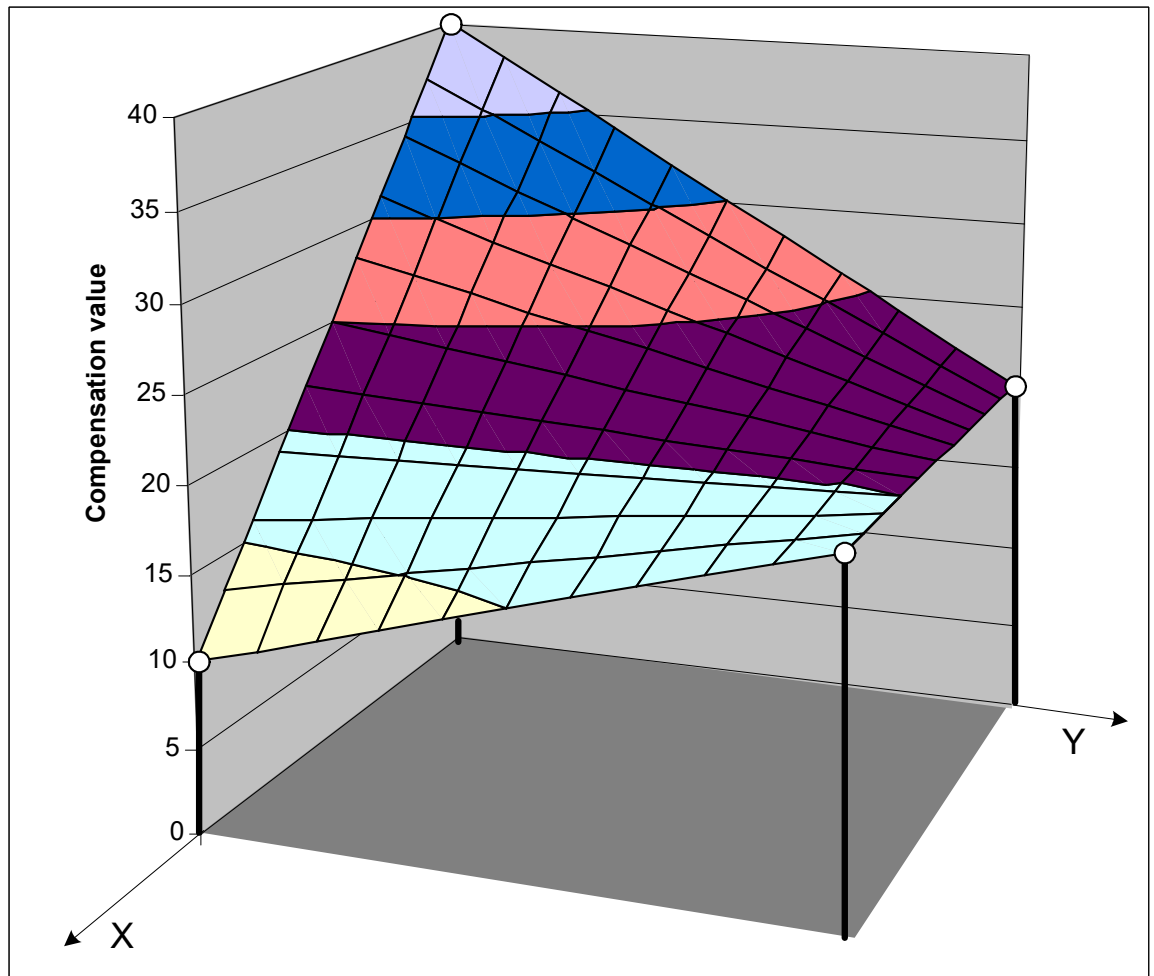


Fig. 12: Linear interpolation between the 4 interpolation points of a square

Effectiveness

Plane compensation is only effective if all the following conditions are fulfilled:

- The function was activated for the slave axis.
- The compensation value table was provided.
- Master and slave axes are linear axes. As of CNC Build v263.1504, plane compensation can also be used for rotary axes or spindles.
- Master axes have an absolute measuring system or were referenced.

4.3.1 Parameter

4.3.1.1 Overview

Activation

Plane compensation is activated in the axis machine record of the slave axis by P-AXIS-00174:

| Variable name | Type | Meaning |
|---------------------|---------|----------------------------------------------------------|
| lr_param.crosscomp2 | BOOLEAN | 0: no plane compensation 1: Plane compensation active |



Programming Example

Excerpt from the axis parameter list:

```
:  
lr_param.crosscomp2      1  
:
```

Activating/deactivating

Plane compensation (ON if master axes are referenced and compensation is activated) can be switched on or off at any time when the slave axis is at standstill. The slave axis command positions displayed are offset with the offset values.

Filter:

When master axes are referenced, inconsistencies may occur when compensation values are calculated for a moved slave axis. These inconsistencies can be smoothed by using a \sin^2 filter. The parameter P-COMP-00027 [P 52] (n_cycles) switches the filter order to activate it.

Special feature for rotary master axes

As of CNC Build v263.1504, plane compensation can also be used for rotary axes or spindles. A modulo calculation of the axis position is carried out in the position controller for these axis types.

If a plane compensation master axis is a modulo axis, a "modulo transition" also takes place in the compensation table in the modulo transition of the axis position of this master axis. To prevent a jump from occurring at this point of the compensation value process of the slave axis, the same compensation value must be specified in the compensation table at the modulo transition.

Management data of the plane compensation table

The general data of the list body parameterise the axes involved, the limits of the compensation range, etc. General data is entered in the structure **kw.crosscomp2.***. It contains the following elements.

Management data elements

| Variable name | Type | Meaning |
|------------------------|---------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| unit | BOOLEAN | Unit of the length entries: 0: Encoder increments 1: metric (in 0.1 µm) |
| grid | STRING | Type of interpolation point sample grid: QUADRATIC: Identical grid structure, interval for both master axes RECTANGULAR: Different grid structure, interval1 and interval2 for both master axes |
| interval | UNS32 | Interval between 2 interpolation points in 0.1 µm for the two master axes (grid = QUADRATIC) |
| interval1 | UNS32 | Interval of the first master axis between 2 interpolation points in 0.1 µm (grid = RECTANGULAR) |
| interval2 | UNS32 | Interval of 2nd master axis between 2 interpolation points in 0.1 µm (grid = RECTANGULAR) |
| last_index_master1 | SGN32 | Last valid index in the table for master axis 1 (see Limits of compensation table [▶ 46]). The table always starts with index 0 |
| last_index_master2 | SGN32 | Last valid index in the table for master axis 2 (see Limits of compensation table [▶ 46]). The table always starts with index 0 |
| start_position_master1 | SGN32 | Position of master axis 1 at which the compensation table starts |
| start_position_master2 | SGN32 | Position of master axis 2 at which the compensation table starts |
| master1_ax_nr | UNS16 | Log. axis number of master axis 1 |
| master2_ax_nr | UNS16 | Log. axis number of master axis 2 |
| n_cycles | UNS16 | Number of cycles of sin ² filter. |
| manual_activation | BOOLEAN | 0: Default: The CNC activates plane compensation automatically as soon as the required conditions are met (e.g. the master axes are referenced) 1: Plane compensation must be activated explicitly in the NC program by the COMP command (see section "Selecting/deselecting axis compensations in the NC program [▶ 107]"). Compensation is deactivated at the end of the NC program, when the CNC is reset or when the axis is released. |

Limits of compensation table

As of CNC Build V3.1.3079.06 the maximum possible of table entries can be defined in P-COMP-00061 [▶ 48]. In previous builds, the entries “last_index_master1”(P-COMP-00010 [▶ 49]) and “last_index_master2” (P-COMP-00011 [▶ 50]) are limited to 100 entries.

This rigid limitation non longer applies. Note only that:

P-COMP-00010 [▶ 49] x P-COMP-00011 [▶ 50] <= P-COMP-00061 [▶ 48]

Compensation values of plane compensation

The corresponding compensation value of the slave axis is entered in the table **kw.crosscomp2.table[j][i].*** for every interpolation point.

Compensation value table

| Variable name | Type | Meaning |
|------------------------|-------|-----------------------------------------------------------------------------------|
| table[j][i].correction | SGN32 | Compensation value of slave axis at interpolation point [j][i], see figure below. |



Notice

When interpolation points are indexed in the compensation value table, the **1.** index j always refers to the **2.** master axis (see figure below).

Index j -> master axis 2

Index i -> master axis 1



Notice

Unassigned interpolation points are assigned the value 0 in the compensation value table. This value is also used in the calculation.

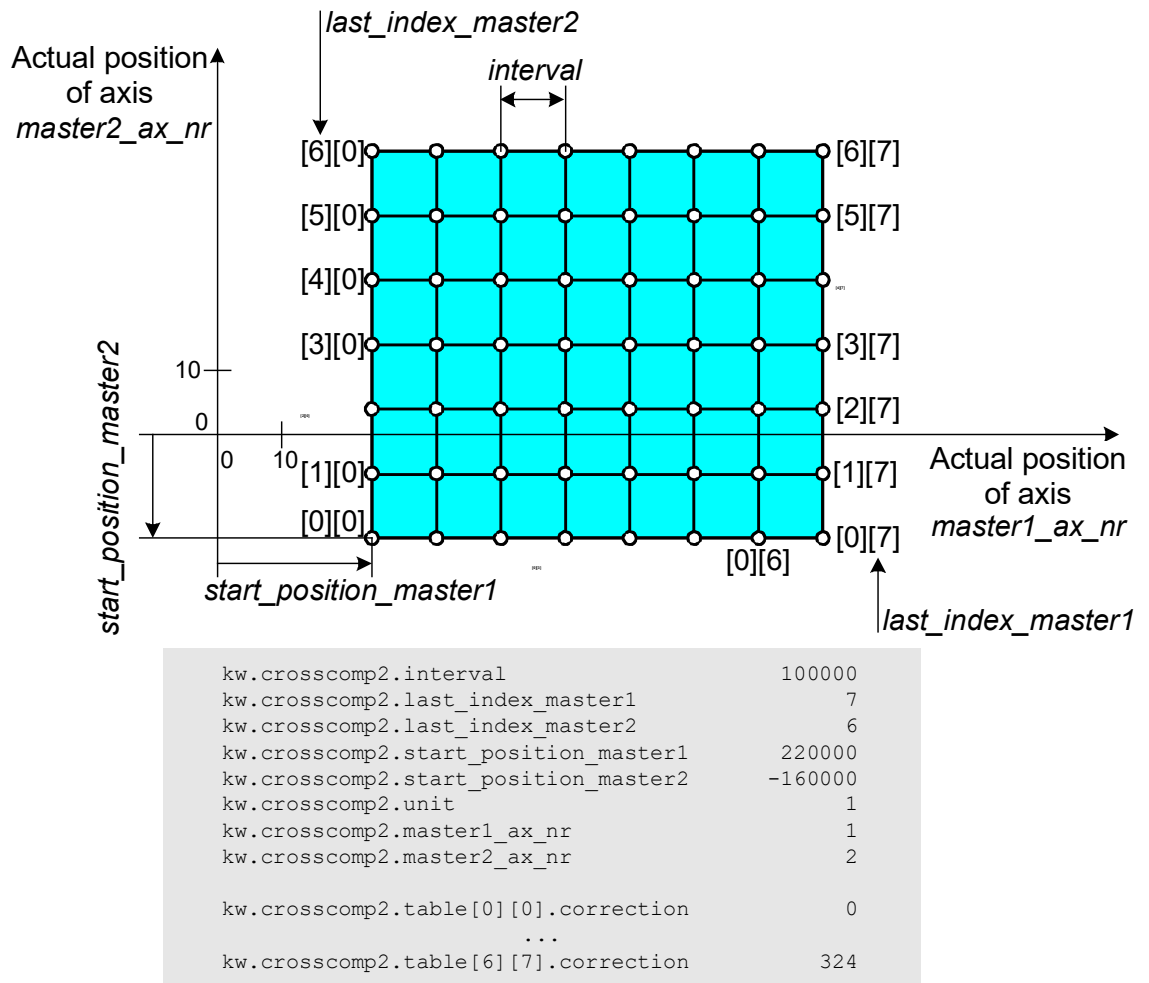


Fig. 13: Compensation value list parameters

4.3.1.2 Description

| P-AXIS-00174 | Activation of plane compensation |
|---------------|-------------------------------------------------------------------------------------|
| Description | This parameter activates the plane compensation (2-dimensional cross compensation). |
| Parameter | lr_param.crosscomp2 |
| Data type | BOOLEAN |
| Data range | 0/1 |
| Axis types | T |
| Dimension | T: ---- |
| Default value | 0 |
| Drive types | ---- |
| Remarks | |

| P-COMP-00061 | Maximum number of table entries for plane compensation | |
|---------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------|
| Description | <p>This plane compensation parameter (FCT-C5 [▶ 41]) saves the memory space required for a particular number of table entries.</p> <p>The size of the actually used compensation table is defined by `last_index:master1` (P-COMP-00010) and `last_index_master2` (P-COMP-00011) and the following must apply:</p> $(\text{`last_index_master1`} + 1) * (\text{`last_index_master2`} + 1) \leq \text{`max_points'}$ <p>If `max_points` is not specified (or assigned the value 0), the previous restrictions apply to `last_index_master1` and `last_index_master2`.</p> <ul style="list-style-type: none"> • $0 \leq \text{`last_index_master1`} \leq 100$ • $0 \leq \text{`last_index_master2`} \leq 100$ | |
| Parameter | kw.crosscomp2.max_points | |
| Data type | UNS32 | |
| Data range | 0 ≤ P-COMP-00061 | |
| Axis types | T, R, S | |
| Dimension | T: ---- | R,S: ---- |
| Default value | 10201 (*) | |
| Remarks | <p>The parameter value can no longer be changed after start-up or after lists are reloaded. Otherwise error ID 110640 is output.</p> <p>If P-COMP-00061 is not specified (or assigned the value 0), the default value is assigned to P-COMP-00061 for downward compatibility reasons.</p> <p>To avoid the default assignment, memory can be saved for an axis that does not use plane compensation [▶ 41] by assigning the value 1 to P-COMP-00061.</p> <p>* composition of the default value: $101 * 101 = 10201$</p> <p>This parameter is available as of CNC Build V3.3079.06</p> | |

| P-COMP-00008 | Unit of the length entries | |
|---------------------|-------------------------------------------------------------------|-----------|
| Description | This parameter defines the unit of the length / position entries. | |
| Parameter | kw.crosscomp2.unit | |
| Data type | BOOLEAN | |
| Data range | 0: Encoder increments 1: Metric (in 0.1 µm) | |
| Axis types | T, R, S | |
| Dimension | T: ---- | R,S: ---- |
| Default value | 0 | |
| Remarks | | |

| P-COMP-00009 | Distance between interpolation points | |
|---------------------|--------------------------------------------------------------------------------------------------------------------------------------------|----------------------------|
| Description | This parameter defines the distance between two interpolation points if both axes use an identical grid (P-COMP-000031(grid) = QUADRATIC). | |
| Parameter | kw.crosscomp2.interval | |
| Data type | UNS32 | |
| Data range | 0 < interval < MAX(UNS32) | |
| Axis types | T, R, S | |
| Dimension | T: 0.1 µm or increments | R,S: 0.0001° or increments |
| Default value | 0 | |
| Remarks | | |

| P-COMP-00010 | Last index of master axis 1 | |
|---------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------|
| Description | This parameter determines the last valid index in the table of master axis 1 (maximum value is 100). The table always starts with index 0. | |
| Parameter | kw.crosscomp2.last_index_master1 | |
| Data type | SGN32 | |
| Data range | 0 ≤ P-COMP-00010 ≤ 100 | |
| Axis types | T, R, S | |
| Dimension | T: ---- | R,S: ---- |
| Default value | 0 | |
| Remarks | <p>As of Build V3.1.3079.06, P-COMP-00010 is freely assignable. There is no upper limit. However, the condition of P-COMP-00061 [▶ 48] must be complied with.</p> <p>P-COMP-00010 * P-COMP-00011 [▶ 50] ≤ P-COMP-00061 [▶ 48]</p> <p>Attention:</p> <p>If this parameter is re-interpreted, all the values in the compensation value table (P-COMP-00016 [▶ 51]) must be read in again.</p> | |

| P-COMP-00011 | Last index of master axis 2 | |
|---------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------|
| Description | This parameter determines the last valid index in the table of the two master axes (maximum 100 values). The table always starts with index 0. | |
| Parameter | kw.crosscomp2.last_index_master2 | |
| Data type | SGN32 | |
| Data range | $0 \leq \text{P-COMP-00011} \leq 100$ | |
| Axis types | T, R, S | |
| Dimension | T: ---- | R,S: ---- |
| Default value | 0 | |
| Remarks | <p>As of Build V3.1.3079.06, P-COMP-00011 is freely assignable. There is no upper limit. However, the condition of P-COMP-00061 [▶ 48] must be complied with.</p> <p>P-COMP-00010 [▶ 49] * P-COMP-00011 \leq P-COMP-00061 [▶ 48]</p> <p>Attention:</p> <p>If this parameter is re-interpreted, all the values in the compensation value table (P-COMP-00016 [▶ 51]) must be read in again.</p> | |

| P-COMP-00012 | Start position of master axis 1 | |
|---------------------|--------------------------------------------------------------------------------------------|----------------------------|
| Description | This parameter determines the start position of master axis 1 in the compensation table. | |
| Parameter | kw.crosscomp2.start_position_master1 | |
| Data type | SGN32 | |
| Data range | $\text{MIN}(\text{SGN32}) \leq \text{start_position_master1} < \text{MAX}(\text{SGN32})$ | |
| Axis types | T, R, S | |
| Dimension | T: 0.1 μm or increments | R,S: 0.0001° or increments |
| Default value | 0 | |
| Remarks | | |

| P-COMP-00013 | Start position of master axis 2 | |
|---------------------|--------------------------------------------------------------------------------------------|----------------------------|
| Description | This parameter determines the start position of master axis 2 in the compensation table. | |
| Parameter | kw.crosscomp2.start_position_master2 | |
| Data type | SGN32 | |
| Data range | $\text{MIN}(\text{SGN32}) \leq \text{start_position_master2} < \text{MAX}(\text{SGN32})$ | |
| Axis types | T, R, S | |
| Dimension | T: 0.1 μm or increments | R,S: 0.0001° or increments |
| Default value | 0 | |
| Remarks | | |

| | | |
|---------------------|--------------------------------------------------------------------------|-----------|
| P-COMP-00014 | Logical axis number of the master axis 1 | |
| Description | This parameter defines the logical axis number of the first master axis. | |
| Parameter | kw.crosscomp2.master1_ax_nr | |
| Data type | UNS16 | |
| Data range | $1 \leq \text{master1_ax_nr} \leq \text{MAX (UNS16)}$ | |
| Axis types | T, R, S | |
| Dimension | T: ---- | R,S: ---- |
| Default value | 0 | |
| Remarks | | |

| | | |
|---------------------|---------------------------------------------------------------------------|-----------|
| P-COMP-00015 | Logical axis number of the master axis 2 | |
| Description | This parameter defines the logical axis number of the second master axis. | |
| Parameter | kw.crosscomp2.master2_ax_nr | |
| Data type | UNS16 | |
| Data range | $1 \leq \text{master2_ax_nr} \leq \text{MAX (UNS16)}$ | |
| Axis types | T, R, S | |
| Dimension | T: ---- | R,S: ---- |
| Default value | 0 | |
| Remarks | | |

| | | |
|---------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------|
| P-COMP-00016 | Compensation values for the slave axis | |
| Description | This parameter defines the relative compensation values of the slave axis at interpolation points [j][i]. When indexing the interpolation points in the compensation list, the first index j refers to the second master axis. | |
| Parameter | kw.crosscomp2.table[j][i].correction | |
| Data type | SGN32 | |
| Data range | $\text{MIN(SGN32)} \leq \text{correction} < \text{MAX(SGN32)}$ | |
| Axis types | T, R, S | |
| Dimension | T: 0.1 μm or increments | R,S: 0.0001° or increments |
| Default value | 0 | |
| Remarks | | |

| P-COMP-00027 | Number of cycles for 'smooth switching' | |
|---------------------|--------------------------------------------------------------------------------------------------------------------------|-----------|
| Description | This parameter determines the number of cycles for which plane compensation is activated/deactivated smoothly. | |
| Parameter | kw.crosscomp2.n_cycles | |
| Data type | UNS16 | |
| Data range | 0 ≤ n_cycles ≤ 20 (maximum number of cycles for which cross compensation is activated/deactivated, application-specific) | |
| Axis types | T, R, S | |
| Dimension | T: ---- | R,S: ---- |
| Default value | 0 | |
| Remarks | | |

| P-COMP-00030 | Manual activation | |
|---------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------|
| Description | <p>Plane compensation is automatically activated by the CNC if it selected in the axis parameters (P-AXIS-00174) and the required conditions are met (e.g. axis is homed).</p> <p>If the parameter is set to value 1, plane compensation must be activated explicitly by an NC command (see [PROG//Selecting/deselecting axis compensations in the NC program]). In addition, compensation is deselected at the end of the NC program, at CNC reset and on axis release.</p> | |
| Parameter | kw.crosscomp2.manual_activation | |
| Data type | BOOLEAN | |
| Data range | 0: Automatic activation 1: Manual activation in NC program | |
| Axis types | T, R, S | |
| Dimension | T: ---- | R,S: ---- |
| Default value | 0 | |
| Remarks | | |

| | | |
|---------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------|
| P-COMP-00032 | Distance between the interpolation points of the first master axis | |
| Description | The parameter defines the interval between two interpolation points for the first master axis if both master axes use a different grid (P-COMP-00031(grid) = RECTANGULAR). | |
| Parameter | kw.crosscomp2.interval1 | |
| Data type | UNS32 | |
| Data range | 0 < interval1 < MAX(UNS32) | |
| Axis types | T, R, S | |
| Dimension | T: 0.1 µm or increments | R,S: 0.0001° or increments |
| Default value | 0 | |
| Remarks | | |

| | | |
|---------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------|
| P-COMP-00033 | Distance between the interpolation points on the second master axis | |
| Description | The parameter defines the interval between two interpolation points for the first master axis if both master axes use a different grid (P-COMP-00031(grid) = RECTANGULAR). | |
| Parameter | kw.crosscomp2.interval2 | |
| Data type | UNS32 | |
| Data range | 0 < interval2 < MAX(UNS32) | |
| Axis types | T, R, S | |
| Dimension | T: 0.1 µm or increments | R,S: 0.0001° or increments |
| Default value | 0 | |
| Remarks | | |

4.3.1.3 CNC objects

| | | | |
|--------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------|--------------------------|
| Name | CROSSC::f_is_active | | |
| Description | Cross compensation: active, activate using Description [▶ 34] This means that all preconditions must be met, such as the axis is homed and all necessary enables are on. | | |
| Task | GEO (Port 551) | | |
| Index group | 0x120300 | Index offset | 0x<A _{ID} >004F |
| Data type | BOOLEAN | Length | 1 |
| Attributes | read | Unit | [-] |
| Remarks | | | |

| | | | |
|--------------------|-----------------------------------------------------------------------------|---------------------|--------------------------|
| Name | CROSSC::delta_offset | | |
| Description | Cross compensation: change in compensation value compared to previous cycle | | |
| Task | GEO (Port 551) | | |
| Index group | 0x120300 | Index offset | 0x<A _{ID} >0034 |
| Data type | SGN32 | Length | 4 |
| Attributes | read | Unit | [Incr.] |
| Remarks | | | |

| | | | |
|--------------------|----------------------------------------------|---------------------|--------------------------|
| Name | CC2::correction | | |
| Description | Plane compensation: current effective offset | | |
| Task | GEO (Port 551) | | |
| Index group | 0x120300 | Index offset | 0x<A _{ID} >0052 |
| Data type | SGN32 | Length | 4 |
| Attributes | read | Unit | [Incr.] |
| Remarks | | | |

| | | | |
|--------------------|------------------------------------------------------------------------------------|---------------------|--------------------------|
| Name | CC2::activated | | |
| Description | This object reads whether plane compensation is activated via P-AXIS-00174 [► 47]. | | |
| Task | GEO (Port 551) | | |
| Index group | 0x120300 | Index offset | 0x<A _{ID} >01D7 |
| Data type | BOOLEAN | Length | 1 |
| Attributes | read | Unit | [-] |
| Remarks | | | |

4.3.2 Examples of compensation value lists



Example

Compensation value list for plane compensation

Available as of Build V3.1.3079.06

The parameterisation example below reserved a maximum number of table entries of 50000 entries. The actual number of entries used is defined by the product of “last_index_master1” and “last_index_master2”.

```
# *****  
# Axis compensation data X axis  
# *****  
  
kopf.achs_nr                1  
kopf.log_achs_name          X  
  
# Reserve maximum number of table entries  
kw.crosscomp2.max_points    50000  
kw.crosscomp2.last_index_master1 1000  
kw.crosscomp2.last_index_master2  20  
  
kw.crosscomp2.table[ 0][ 0].correction  -3  
kw.crosscomp2.table[ 0][ 1].correction  -1  
  
...  
kw.crosscomp2.table[ 20][ 999].correction  58  
kw.crosscomp2.table[ 20][1000].correction  49
```



Example

Compensation value list for plane compensation

```
# *****  
# Axis compensation data X axis  
# *****  
  
kopf.achs_nr                1  
kopf.log_achs_name          X  
kw.crosscomp2.interval      100000 /* 10 mm */  
kw.crosscomp2.last_index_master1 100  
kw.crosscomp2.last_index_master2 200  
kw.crosscomp2.start_position_master1 -400000 /* -40 mm */  
kw.crosscomp2.start_position_master2 -700000 /* -70 mm */  
kw.crosscomp2.unit          1 /* 0.1 my */  
kw.crosscomp2.master1_ax_nr 2  
kw.crosscomp2.master2_ax_nr 3  
kw.crosscomp2.n_cycles      20  
  
kw.crosscomp2.table[ 0][ 0].correction  -3  
kw.crosscomp2.table[ 0][ 1].correction  -1  
kw.crosscomp2.table[ 0][ 2].correction   4  
kw.crosscomp2.table[ 0][ 3].correction   9  
kw.crosscomp2.table[ 0][ 4].correction  13  
kw.crosscomp2.table[ 0][ 5].correction  17  
kw.crosscomp2.table[ 0][ 6].correction  42  
kw.crosscomp2.table[ 0][ 7].correction  53
```

```
kw.crosscomp2.table[ 0][ 8].correction      33
kw.crosscomp2.table[ 0][ 9].correction      42
kw.crosscomp2.table[ 0][10].correction      19
kw.crosscomp2.table[ 0][11].correction       7
kw.crosscomp2.table[ 0][12].correction       2
kw.crosscomp2.table[ 0][13].correction       0
kw.crosscomp2.table[ 0][14].correction       5
kw.crosscomp2.table[ 0][15].correction      -3
kw.crosscomp2.table[ 0][16].correction      -7
kw.crosscomp2.table[ 0][17].correction     -11
kw.crosscomp2.table[ 0][18].correction     -13
kw.crosscomp2.table[ 0][19].correction     -22
kw.crosscomp2.table[ 0][20].correction     -34
kw.crosscomp2.table[ 0][21].correction     -29
kw.crosscomp2.table[ 0][22].correction    -99
...
kw.crosscomp2.table[200][ 71].correction     45
kw.crosscomp2.table[200][ 72].correction     68
kw.crosscomp2.table[200][ 73].correction     71
kw.crosscomp2.table[200][ 74].correction     90
kw.crosscomp2.table[200][ 75].correction    111
kw.crosscomp2.table[200][ 76].correction    123
kw.crosscomp2.table[200][ 77].correction    134
kw.crosscomp2.table[200][ 78].correction    147
kw.crosscomp2.table[200][ 79].correction    156
kw.crosscomp2.table[200][ 80].correction    176
kw.crosscomp2.table[200][ 81].correction    167
kw.crosscomp2.table[200][ 82].correction    148
kw.crosscomp2.table[200][ 83].correction    132
kw.crosscomp2.table[200][ 84].correction    123
kw.crosscomp2.table[200][ 85].correction    111
kw.crosscomp2.table[200][ 86].correction    101
kw.crosscomp2.table[200][ 87].correction     97
kw.crosscomp2.table[200][ 88].correction     88
kw.crosscomp2.table[200][ 89].correction     83
kw.crosscomp2.table[200][ 90].correction     82
kw.crosscomp2.table[200][ 91].correction     77
kw.crosscomp2.table[200][ 92].correction     68
kw.crosscomp2.table[200][ 93].correction     63
kw.crosscomp2.table[200][ 94].correction     61
kw.crosscomp2.table[200][ 95].correction     59
kw.crosscomp2.table[200][ 96].correction     57
kw.crosscomp2.table[200][ 97].correction     52
kw.crosscomp2.table[200][ 98].correction     56
kw.crosscomp2.table[200][ 99].correction     58
kw.crosscomp2.table[200][100].correction     49
#
End
```


4.3.3

Error messages

Errors in the configuration of the plane compensation result in deactivation of the function for the affected axis and to the output of an error message (warning message).

The following error messages then appear:

- ID 110640
- ID 70182
- ID 70183
- ID 70184
- ID 70185

4.4 Leadscrew error compensation

Compensation process

Leadscrew error compensation (referred to below as LSEC) is an axial compensation. The position setpoint of the compensated axis is changed by a compensation value in the position controller cycle in order to compensate for leadscrew errors, for instance.

This compensation is cancelled by computation for the measured actual position values so that the compensation performed does not appear in the display data of the controller.

Compensation table

The compensation values are taken from a table in which the profile of the compensation curve is stored as a function of the axis position. The axis positions entered in the table are called interpolation points and the corresponding values of the compensation curve are called compensation values.

The compensation value is linearly interpolated for axis positions that lie between interpolation points.

The table containing compensation values is referred to in the following as the compensation table.

Bilateral/unilateral LSEC

You can specify a separate compensation table for each direction of axis motion; this type of compensation is called bilateral compensation.

With bilateral leadscrew error compensation, any backlash that may be present can also be compensated for; additional backlash compensation (see Section "Backlash compensation [▶ 8]") is therefore not necessary.

With bilateral leadscrew error compensation, the parameter P-AXIS-00243 [▶ 63] specifies the number of cycles for distribution of the compensation offset in case of a reversal in direction.

If a table is used for both directions of axis motion, it is referred to as unilateral compensation.

- The compensation tables are stored to a file for each axis (compensation value list).
- Axis dynamics are not taken into account in the output of compensation values.

The graphic below shows an example of a compensation value curve. The meaning of the parameters used in the graphic will be explained later.

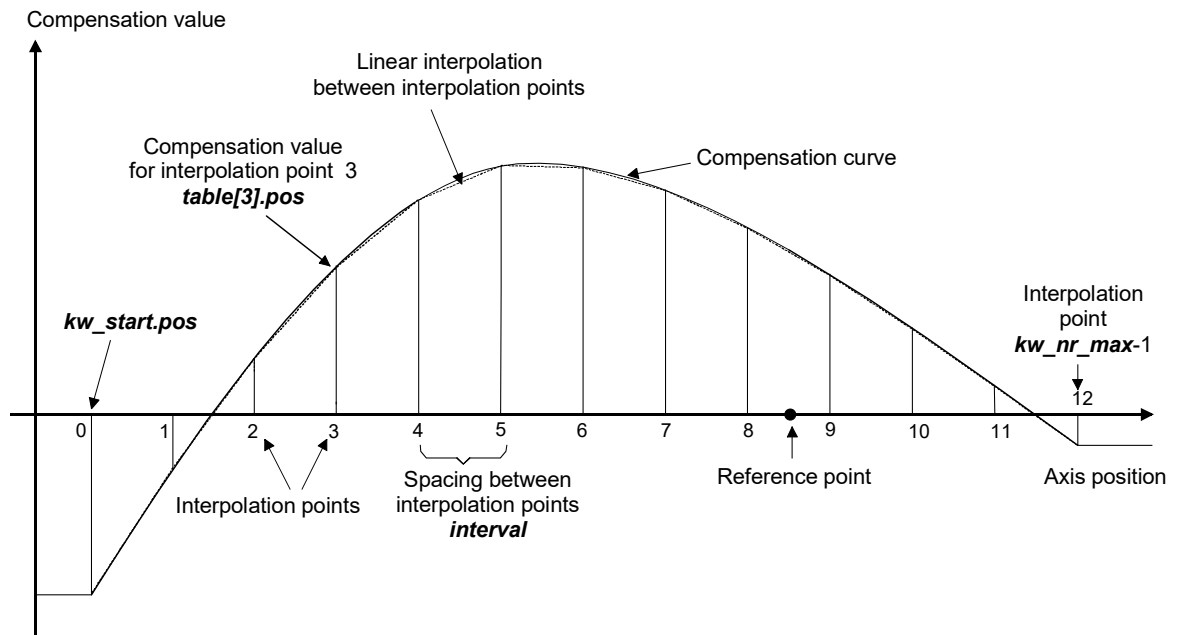


Fig. 14: Compensation table with equidistant interpolation point grid and unilateral compensation

Properties

Leadscrew error compensation (LSEC) has the following characteristics:

- When bilateral compensation is used, the same interpolation point positions must be used for both value tables.
- You can define a compensation table only for a partial motion range of an axis. For axis positions outside the compensation table, the value at either end of the table continues to be used.
- Any compensation value other than 0 can be present at the reference point.
- The distance between interpolation points in the value tables can be selected either equidistant or non-equidistant.
- As of CNC Build V3.1.3079.06 you can adjust the size of the compensation table. The parameter P-COMP-00059 [▶ 64] defines the maximum number of table entries. The actual number of entries used by P-COMP-00020 [▶ 65]

Effectiveness

The LSEC is effective under the following conditions:

- The LSEC was activated for the slave axis.
- A compensation table for the axis must be transferred to the controller.
- The axis was referenced or uses an absolute measuring system.

4.4.1 Parameter

4.4.1.1 Overview

Activation

Leadscrew error compensation (LSEC) is activated in the axis machine data record of the corresponding slave axis by P-AXIS-00175:

| Variable name | Type | Meaning |
|------------------------------------------------|---------|-----------------------------------------------------------------------------------------|
| lr_param.ssfk | BOOLEAN | 0: no LSEC 1: LSEC active |
| P-AXIS-00243 [▶ 63] lr_param.n_backlash_cyc | UNS16 | Number of cycles with bilateral leadscrew error compensation with reversal of direction |



Example

Excerpt from the axis parameter list:

```
:  
lr_param.ssfk      1  
:
```

Management data of the LSEC table

The general data of the list body parameterises the operation mode of the compensation, e.g. unilateral or bilateral. General data is entered in the structure **kw.ssfk..*** and contains the following elements.

Management data elements

| Variable name | Type | Meaning |
|----------------------|---------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| unit | BOOLEAN | Unit of the length entries: 0: Encoder increments 1: metric (in 0.1 µm) |
| interval | SGN32 | Distance between interpolation points of the compensation table for use if using equidistant interpolation points. If this parameter is = 0, the position of each interpolation point must be specified separately. |
| kw_startpos | SGN32 | Start position of the compensation table (with equidistant interpolation points) |
| kw_nr_max | SGN32 | Number of entries in the compensation table As of CNC Build V3.1.3079.06, the maximum possible number of entries can be defined in P-COMP-00059 [▶ 64] . In previous builds the default value is 1500. |
| bilateral | BOOLEAN | 0: Unilateral compensation 1: Bilateral compensation |
| modulo | BOOLEAN | Compensation for a modulo axis take place |
| manual_activation | BOOLEAN | 0 (default): The CNC activates leadscrew error compensation automatically as soon as the required conditions are met (e.g. the master axis is referenced) 1: Leadscrew error compensation must be activated explicitly in the NC program by the COMP command (see Section “Selecting/deselecting axis compensations in the NC program“) [▶ 107] . Compensation is deactivated at the end of the NC program, when the CNC is reset or when the axis is released. |
| set_pos_without_comp | BOOLEAN | By default, leadscrew error compensation also considers the compensation values generated from other axis compensations, e.g. cross and plane compensation. Direction-dependent leadscrew error compensation (see P-COMP-00021 [▶ 60]) may result in undesired backlash cover. The parameter set_pos_without_comp can disable the inclusion of other compensation values in the calculation. 0: Compensation values of other compensations are considered in the leadscrew error compensation. 1: Compensation values of other compensations are not considered. |

LSEC compensation values

The compensation values are specified in the table **kw.ssfk.table[i].***.

The field index *i* can then assume the value 0 to **kw.ssfk.kw_nr_max** – 1. The maximum number of entries is specified in [SYSP//Number 2.23].

The compensation values are specified as absolute position errors in the unit specified in **kw.ssfk.unit** (metric in 0.1 µm or incremental). Where:

| | |
|-----------------|----------------------------------------------------------------------------|
| $[\Delta]_{si}$ | <i>i</i> -th compensation value |
| $s_{soll, i}$ | <i>i</i> -th command value (interpolation point of the compensation table) |
| $s_{ist, i}$ | <i>i</i> -th actual value (measured with reference measuring system) |

Compensation value table

| Variable name | Type | Meaning |
|---------------|-------|---------------------------------------------------------------------------------------------------------------------------------------------|
| pos | SGN16 | Compensation value for motion in a positive direction (bilateral compensation) and compensation value for use with unilateral compensation. |
| neg | SGN16 | Compensation value for motion in a negative direction. Not used with unilateral SSKF. |
| setpoint | SGN32 | Interpolation point of the axis (programmed value). Only with non equidistant interpolation points. |

For use with bilateral compensation, enter position errors for motion in a position direction in the **pos** entry, The interpolation points specified are valid for both directions.

For use with unilateral compensation, also enter position errors in the **pos** Entry. The **neg** entry is omitted.

As opposed to the entry of individual interpolation points for the compensation table, a grid structure can also be used. Entries for interpolation points can then be omitted in the **setpoint** variable in this case.

To use an interpolation point grid, enter the increment of the interpolation point grid in the **kw.ssfk.interval** variable. The interpolation points are then calculation internally from the start position (**kw.ssfk.kw_startpos**) and the increment.

Special features applicable to modulo axes

If a compensation table is configured for a modulo axis (**kw.ssfk.modulo = 1**), a modulo transition also occurs in the compensation table at the modulo transition of the axis position.

This can be used in order to compensate for position errors caused by gears or transmissions for instance.

The following special aspects must be noted:

- The position values of the first and last entries in the compensation list must be identical.
- The number of compensation values is also equal here to the number of entries in the compensation value table.

4.4.1.2 Description

| P-AXIS-00175 | Activation of SSFK | |
|---------------------|-------------------------------------------------------------|---------|
| Description | This parameter activates the lead screw error compensation. | |
| Parameter | lr_param.ssfk | |
| Data type | BOOLEAN | |
| Data range | 0/1 | |
| Axis types | T, R | |
| Dimension | T: ---- | R: ---- |
| Default value | 0 | |
| Drive types | ---- | |
| Remarks | | |

| P-AXIS-00243 | Distribution of the backlash on multiple cycles | |
|---------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------|
| Description | <p>The parameter defines a number of position control cycles on which the backlash is distributed. The distribution is done according to a \sin^2 function.</p> <p>The parameter is also used for bi-directional lead screw error compensation if a change of direction is executed.</p> | |
| Parameter | lr_param.n_backlash_cyc | |
| Data type | UNS16 | |
| Data range | $0 < n_backlash_cyc < 20$ | |
| Axis types | T, R, S | |
| Dimension | T: Number of interpolation cycles | R,S: Number of interpolation cycles |
| Default value | 0 | |
| Drive types | ---- | |
| Remarks | <p>For the values 0 or 1 the output of the backlash to the drive is done abruptly within one cycle. A value larger than 1 creates a distribution according to the \sin^2 function</p> <p>The use of this feature avoids increasing errors at the workpiece, because for large backlash the machine excitation is reduced.</p> | |

| P-COMP-00059 | Maximum number of table entries for leadscrew error compensation | |
|---------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------|
| Description | <p>This leadscrew error compensation parameter (FCT-C5 [► 58]) sets the memory space required for a particular number of table entries.</p> <p>The size of the actually used compensation table is defined by `kw_nr_max` (P-COMP-00020) and `kw_nr_max` must be smaller than `max_points`.</p> | |
| Parameter | kw.ssfk.max_points | |
| Data type | UNS32 | |
| Data range | 0 <= P-COMP-00059 | |
| Axis types | T, R, S | |
| Dimension | T: ---- | R,S: ---- |
| Default value | 1500 | |
| Remarks | <p>The parameter value can no longer be changed after start-up or after lists are reloaded. Otherwise error ID 110638 is output.</p> <p>If P-COMP-00059 is not specified (or assigned the value 0), the default value is assigned to P-COMP-00059 for downward compatibility reasons.</p> <p>To avoid the default assignment, memory can be saved for an axis that does not use leadscrew error compensation [► 58] by assigning the value 1 to P-COMP-00059.</p> <p>This parameter is available as of CNC Build V3.3079.06</p> | |

| P-COMP-00017 | Unit of the length entries | |
|---------------------|-------------------------------------------------------------------|-----------|
| Description | This parameter defines the unit of the length / position entries. | |
| Parameter | kw.ssfk.unit | |
| Data type | BOOLEAN | |
| Data range | 0: Encoder increments 1: Metric (in 0.1 µm) | |
| Axis types | T, R, S | |
| Dimension | T: ---- | R,S: ---- |
| Default value | 0 | |
| Remarks | | |

| | | |
|---------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------|
| P-COMP-00018 | Distance between interpolation points | |
| Description | The parameter defines the distance between interpolation points of the compensation table when equidistant interpolation points are used. If this parameter is = 0, the position of each interpolation point must be specified separately. | |
| Parameter | kw.ssfk.interval | |
| Data type | SGN32 | |
| Data range | $0 \leq \text{interval} < \text{MAX}(\text{SGN32})$ | |
| Axis types | T, R, S | |
| Dimension | T: 0.1 µm or increments | R,S: 0.0001° or increments |
| Default value | 0 | |
| Remarks | | |

| | | |
|---------------------|--------------------------------------------------------------------------------------------|----------------------------|
| P-COMP-00019 | Start position of compensation values | |
| Description | This parameter determines the position of the axis at which the compensation table starts. | |
| Parameter | kw.ssfk.kw_startpos | |
| Data type | SGN32 | |
| Data range | $\text{MIN}(\text{SGN32}) \leq \text{kw_startpos} < \text{MAX}(\text{SGN32})$ | |
| Axis types | T, R, S | |
| Dimension | T: 0.1 µm or increments | R,S: 0.0001° or increments |
| Default value | 0 | |
| Remarks | | |

| | | |
|---------------------|-------------------------------------------------------------------------|-----------|
| P-COMP-00020 | Number of compensation values | |
| Description | This parameter defines the number of entries in the compensation table. | |
| Parameter | kw.ssfk.kw_nr_max | |
| Data type | SGN32 | |
| Data range | $0 \leq \text{kw_nr_max} < \text{P-COMP-00059}$ [▶ 64] | |
| Axis types | T, R, S | |
| Dimension | T: ---- | R,S: ---- |
| Default value | 0 | |
| Remarks | P-COMP-00059 [▶ 64] is available as of Build V3.1.3079.06. | |

| P-COMP-00021 | Operation mode of compensation | |
|---------------------|-------------------------------------------------------------------------|-----------|
| Description | This parameter defines whether compensation is unilateral or bilateral. | |
| Parameter | kw.ssfk.bilateral | |
| Data type | BOOLEAN | |
| Data range | 0: Unilateral compensation 1: Bilateral compensation | |
| Axis types | T, R, S | |
| Dimension | T: ---- | R,S: ---- |
| Default value | 0 | |
| Remarks | | |

| P-COMP-00022 | Compensation of a modulo axis | |
|---------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------|
| Description | This parameter defines the compensation table for a modulo axis. A modulo transition also takes place in the compensation table on the modulo transition of the axis position. The number of compensation values must then be equal to the number of entries in the compensation value table. | |
| Parameter | kw.ssfk.modulo | |
| Data type | BOOLEAN | |
| Data range | 0: Compensation without modulo handling 1: Compensation for a modulo axis | |
| Axis types | T, R, S | |
| Dimension | T: ---- | R,S: ---- |
| Default value | 0 | |
| Remarks | | |

| P-COMP-00023 | Compensation value in positive direction | |
|---------------------|-------------------------------------------------------------------------------------------------------------------|----------------------------|
| Description | This parameter defines a compensation value in case of movement in positive direction at interpolation point 'i'. | |
| Parameter | kw.ssfk.table[i].pos | |
| Data type | SGN32 | |
| Data range | $\text{MIN}(\text{SGN32}) \leq \text{pos} < \text{MAX}(\text{SGN32})$ | |
| Axis types | T, R, S | |
| Dimension | T: 0.1 µm or increments | R,S: 0.0001° or increments |
| Default value | 0 | |
| Remarks | | |

| | | |
|---------------------|-------------------------------------------------------------------------------------------------------------------|----------------------------|
| P-COMP-00024 | Compensation value in negative direction | |
| Description | This parameter defines a compensation value in case of movement in negative direction at interpolation point 'i'. | |
| Parameter | kw.ssfk.table[i].neg | |
| Data type | SGN32 | |
| Data range | MIN(SGN32) ≤ neg < MAX(SGN32) | |
| Axis types | T, R, S | |
| Dimension | T: 0.1 µm or increments | R,S: 0.0001° or increments |
| Default value | 0 | |
| Remarks | | |

| | | |
|---------------------|------------------------------------------------------------------------------------------------------|----------------------------|
| P-COMP-00025 | Interpolation points of the axis | |
| Description | This parameter determines the interpolation points of the axis for which the axis must be corrected. | |
| Parameter | kw.ssfk.table[i].setpoint | |
| Data type | SGN64 | |
| Data range | MIN(SGN64) ≤ setpoint < MAX(SGN64) | |
| Axis types | T, R, S | |
| Dimension | T: 0.1 µm or increments | R,S: 0.0001° or increments |
| Default value | 0 | |
| Remarks | In CNC Builds V2.11.20xx and higher, the data type is SGN32 and so is the related data range. | |

| | | |
|---------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------|
| P-COMP-00028 | Manual activation | |
| Description | <p>Leadscrew error compensation is automatically activated by the CNC if it selected in the axis parameters (P-AXIS-00175) and the required conditions are met (e.g. axis is homed).</p> <p>If the parameter is set to value 1, leadscrew error compensation must be explicitly activated by an NC command (see [PROG//Selecting/deselecting axis compensations in the NC program]). In addition, compensation is deselected at the end of the NC program, at CNC reset and on axis release.</p> | |
| Parameter | kw.ssfk.manual_activation | |
| Data type | BOOLEAN | |
| Data range | 0: Automatic activation 1: Manual activation in NC program | |
| Axis types | T, R, S | |
| Dimension | T: ---- | R,S: ---- |
| Default value | 0 | |
| Remarks | | |

| P-COMP-00057 | Consideration of other axis compensations | |
|---------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------|
| Description | <p>By default, leadscrew error compensation also considers the compensation values generated from other axis compensations, e.g. cross and plane compensation. With direction-dependent spindle leadscrew error compensation (see P-COMP-00021) this may result in the undesirable occurrence of backlash under certain circumstances.</p> <p>The parameter set_pos_without_comp can disable the inclusion of other compensation values in the calculation.</p> | |
| Parameter | kw.ssfk.set_pos_without_comp | |
| Data type | BOOLEAN | |
| Data range | <p>0: Compensation values of other compensations are considered in the leadscrew error compensation.</p> <p>1: Compensation values of other compensations are not considered.</p> | |
| Axis types | T, R, S | |
| Dimension | T: ---- | R,S: ---- |
| Default value | 0 | |
| Remarks | | |

4.4.1.3 CNC objects

| | | | |
|--------------------|-------------------------------------------------------------------------------|---------------------|--------------------------|
| Name | ssfk activated | | |
| Description | Leadscrew error compensation (LSEC);active, activate with P-AXIS-00175 [► 63] | | |
| Task | GEO (Port 551) | | |
| Index group | 0x120300 | Index offset | 0x<A _{ID} >0038 |
| Data type | BOOLEAN | Length | 1 |
| Attributes | read | Unit | [-] |
| Remarks | | | |

| | | | |
|--------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------|--------------------------|
| Name | LSEC::active | | |
| Description | <p>This object reads whether leadscrew error compensation is active.</p> <p>This means that all preconditions must be met, such as the axis is homed and all necessary enables are on.</p> <p>(leadscrew error compensation - LSEC)</p> | | |
| Task | GEO (Port 551) | | |
| Index group | 0x120300 | Index offset | 0x<A _{ID} >00D0 |
| Data type | BOOLEAN | Length | 1 |
| Attributes | read | Unit | [-] |
| Remarks | | | |

| | | | |
|--------------------|-----------------------------------------------------------------------------------------------------------------------------------------|---------------------|--------------------------|
| Name | LSEC::epsilon | | |
| Description | <p>Leadscrew error compensation: change in compensation value compared to previous cycle</p> <p>Leadscrew error compensation (LSEC)</p> | | |
| Task | GEO (Port 551) | | |
| Index group | 0x120300 | Index offset | 0x<A _{ID} >001C |
| Data type | SGN32 | Length | 4 |
| Attributes | read | Unit | [Incr.] |
| Remarks | | | |

| | | | |
|--------------------|-----------------------------------------------------------------------------------------------------|---------------------|--------------------------|
| Name | LSEC::sum epsilon | | |
| Description | Leadscrew error compensation: sum of all compensation values Leadscrew error compensation (LSEC) | | |
| Task | GEO (Port 551) | | |
| Index group | 0x120300 | Index offset | 0x<A _{ID} >001D |
| Data type | SGN32 | Length | 4 |
| Attributes | read | Unit | [Incr.] |
| Remarks | | | |

4.4.2 Example - Non-equidistant bilateral SSFK

The diagram below shows a compensation value table with the properties:

- Non-equidistant interpolation points (`kw.ssfk.interval = 0`)
- Bilateral compensation table (`kw.ssfk.bilateral = 1`)
- Position specifications in metric system (`kw.ssfk.unit = 1`)
- Compensation value table with 140 entries (`kw.ssfk.kw_nr_max = 140`). The index of the position and setpoint entries goes from 0 to 139.

The following values were measured at the third gauged position (`table[3]`):

| Programmed Position $s_{soll,i}$ ith setpoint | pos measurement value $s_{ist,i}$ ith actual value (pos direction) | neg measurement value $s_{ist,i}$ ith actual value (neg direction) | computed pos compensation value $\Delta s_i = s_{ist,i} - s_{soll,i}$ | Computed neg compensation value $\Delta s_i = s_{ist,i} - s_{soll,i}$ |
|--------------------------------------------------|--------------------------------------------------------------------------|--------------------------------------------------------------------------|--------------------------------------------------------------------------|--------------------------------------------------------------------------|
| 19866.7 μm | 19856.5 μm | 19874.7 μm | -102 x 0.1 μm | 80 x 0.1 μm |



Programing Example

Non-equidistant bilateral SSFK

```

kopf.achs_nr                2
kopf.log_achs_name          Y AXIS
kw.ssfk.interval            0
kw.ssfk.kw_startpos        -200000
kw.ssfk.kw_nr_max          140
kw.ssfk.unit                1
kw.ssfk.bilateral           1
kw.ssfk.table[0].setpoint   -200000
kw.ssfk.table[1].setpoint   -199306
kw.ssfk.table[2].setpoint   -198667
kw.ssfk.table[3].setpoint   -198001
...
kw.ssfk.table[138].setpoint  334488
kw.ssfk.table[139].setpoint  335591
kw.ssfk.table[0].pos        0
kw.ssfk.table[1].pos        24
kw.ssfk.table[2].pos        -102
...
kw.ssfk.table[139].pos      -55
kw.ssfk.table[0].neg        0
kw.ssfk.table[1].neg        67
kw.ssfk.table[2].neg        80
...
kw.ssfk.table[139].neg      114
    
```

4.4.3 Error messages

Errors in the configuration of leadscrew error compensation result in deactivation of the function for the affected axis and to the output of an error message (warning message).

The following error messages then appear:

- ID 110217
- ID 110218
- ID 110392
- ID 110474
- ID 110476
- ID 110477
- ID 110478
- ID 110479
- ID110480
- ID 110590
- ID 110638

4.5 Friction compensation

Friction effects in the drive train may cause marks or dimensional variations on the workpiece surface at points in the machining process where a change in axis direction occurs (reversing). The purpose of friction compensation is to minimise these effects and enhance machining results.

Compensation process

Friction compensation reduces position lag and improves surface quality. At the same time, it relieves pressure on the speed controller and when activated, it permits the greater use of dynamic parameters and this reduces machining time.



Notice

Friction compensation can be activated for SERCOS and CANopen drives. This requires the installation of an additive torque interface (additive current) which requires [► 83] configuration.

Characteristics

- When friction compensation is selected, it is active directly after controller start-up
- Friction compensation reduces position lag and axis backlash and increases accuracy.
- Friction compensation is available for all drive types.

Effectiveness

Friction compensation is only effective if all the following conditions are fulfilled:

- The function was activated in the axis parameter list with P-AXIS-00522 (TRUE) or was enabled by an NC command.
- The compensation value table [COMP] was provided.

4.5.1 Types of friction and compensation

Friction

Friction basically occurs at points of contact between bodies moving relative to one another. It manifests itself as the force that counteracts the motion.

According to Stribeck, the following friction curves result at different velocities:

- Phase 1: Adhesive friction for standstill (boundary friction)
- Phase 2: Mixed friction, Stribeck friction
- Phase 3: Elastohydrodynamic friction

The constant component of friction at velocity $v = 0$ results in a surge in frictional force at speed reversal resulting in backlash.

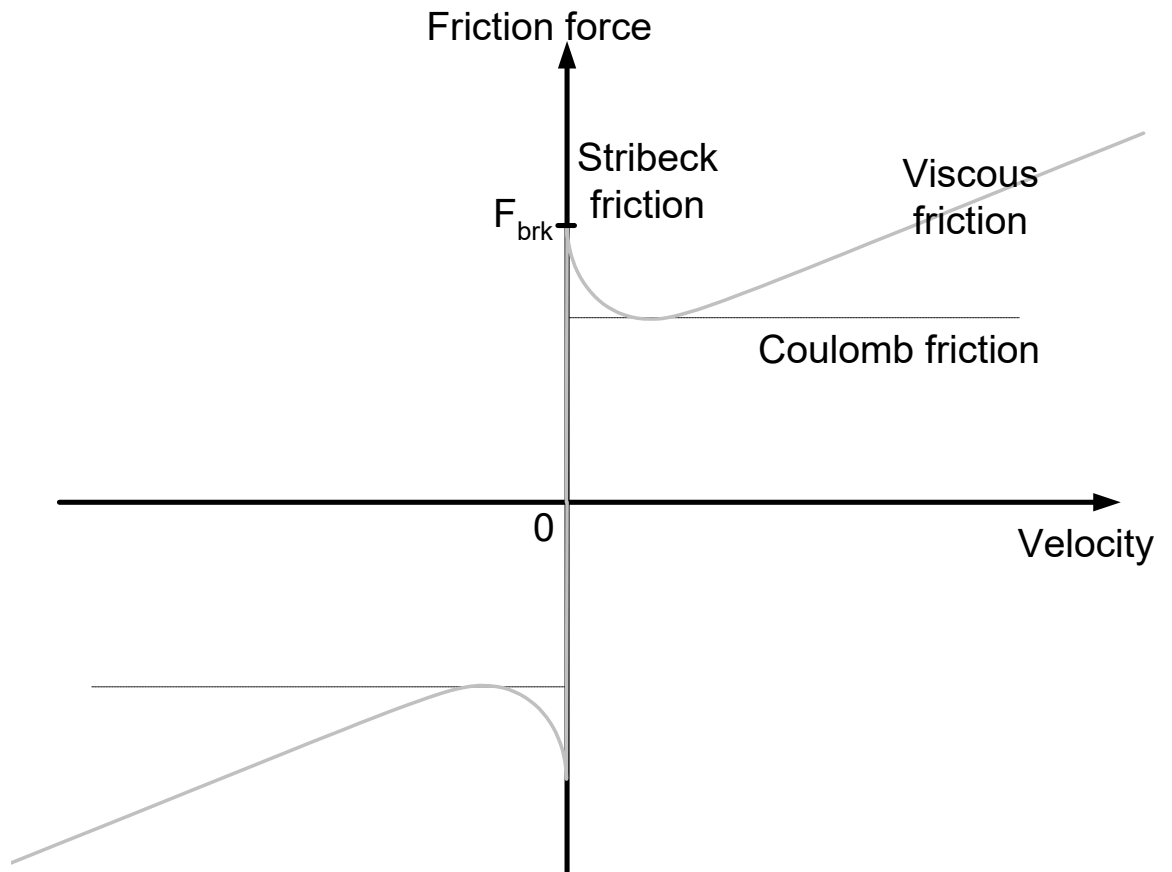


Fig. 15: Theoretical friction curve

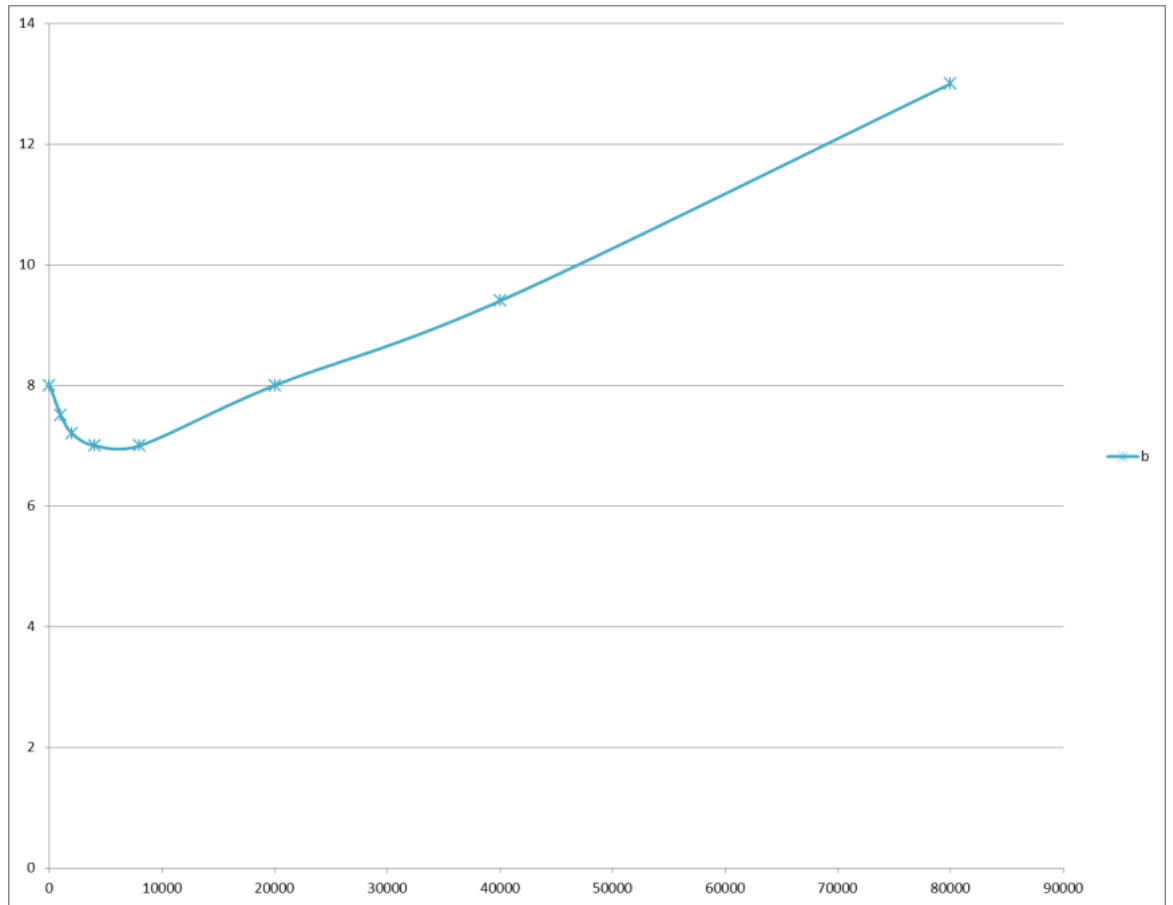


Fig. 16: Measured friction curve

4.5.1.1 Additive current dependent on velocity

Additive current

The purpose of friction compensation is to compensate actually existing friction torque by way of an additional torque. It acts in the form of speed-dependent feedforward control of the motor current.

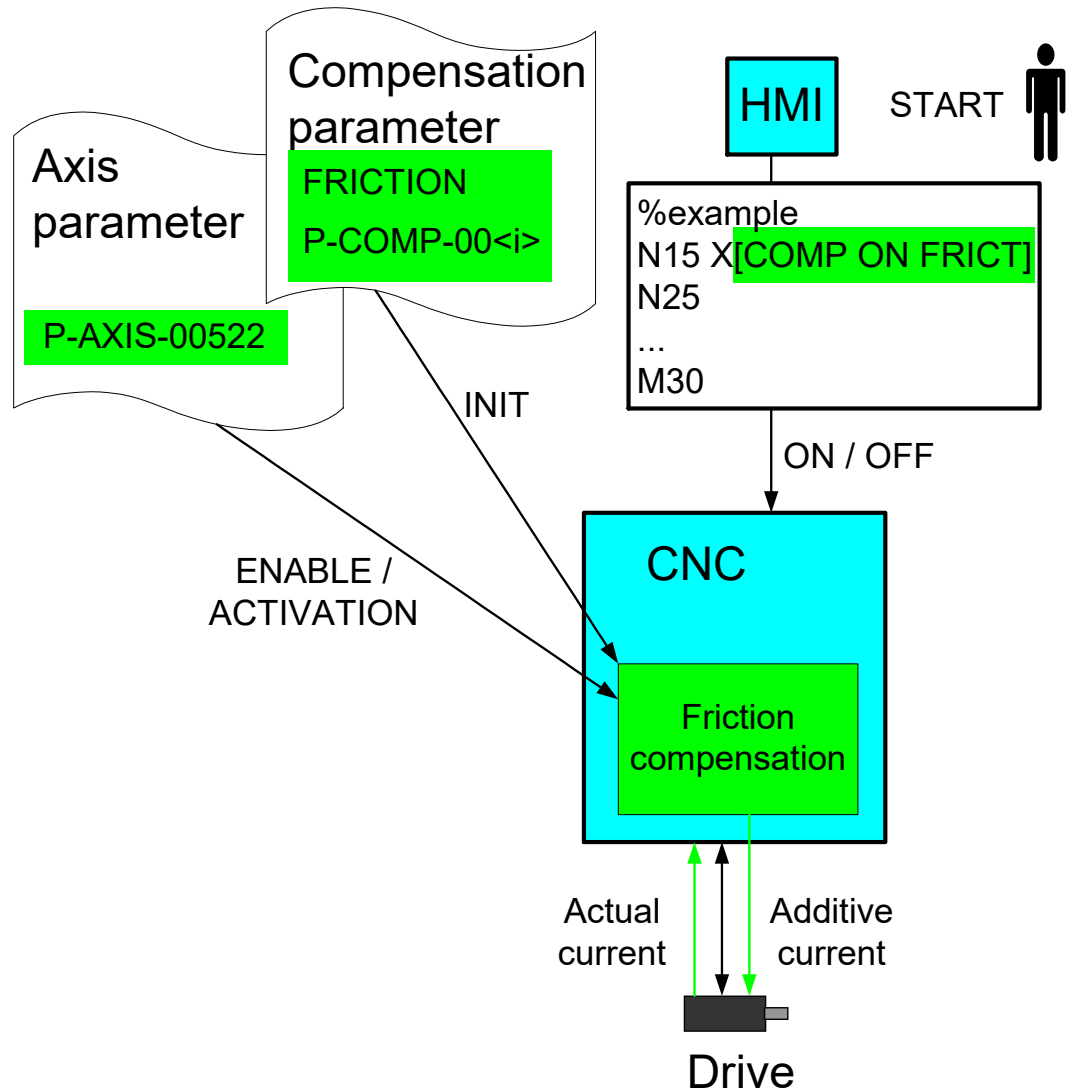


Fig. 17: Principle of friction compensation



Notice

It is basically sufficient to command a additive current to the drive on the setpoint side for friction compensation.

However, to determine the characteristic curve for the current and verify compensation, it is also necessary to read the actual current.

Effect

The algorithm compensates for friction during path motions ($v \neq 0$) by an additional motor current.

Control loop

The effect of friction compensation on closed-loop control is shown in the figure below.

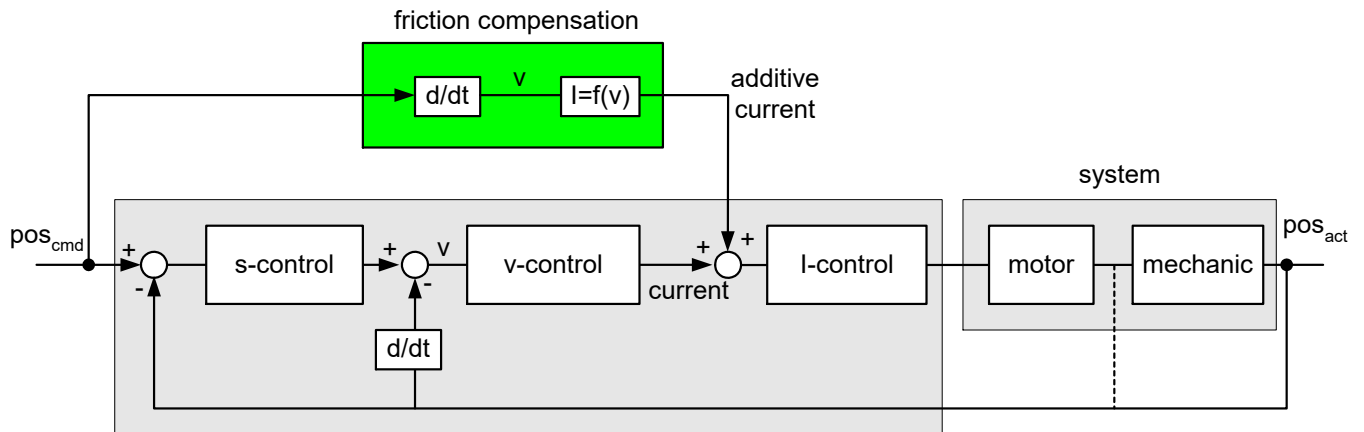


Fig. 18: Add friction compensation to the control loop of an axis

4.5.1.1.1 Reverse the motion direction

Reverse and weight the friction curve

In the Stribeck curve model, a jump in feedforward control current occurs in the axis reversal process (velocity zero crossing).

To prevent this discontinuity, the CNC monitors axis reversal. In this case, the friction model may be weighted before and after zero crossing.

- Before zero crossing: time [number of CNC cycles]
- After zero crossing: Path distance covered [0.1 μm]

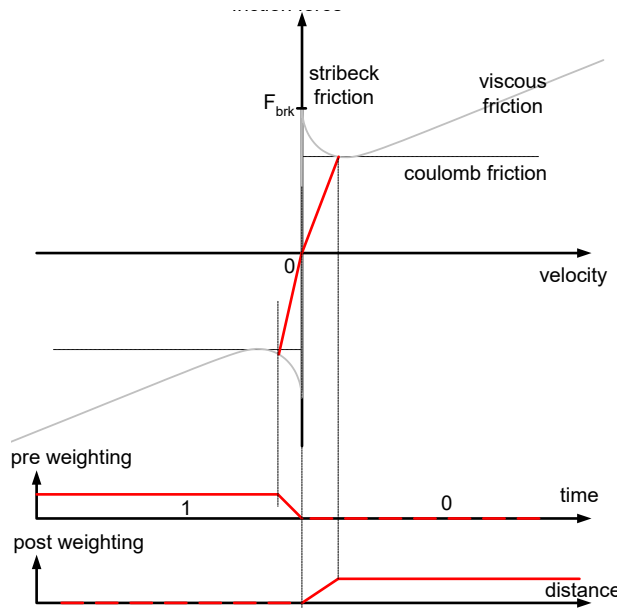


Fig. 19: Weight friction model before/after zero crossing, on reversal from negative to positive velocity



Notice

If no reversal takes place, i.e. the axis is only decelerated and continues in the same direction, the friction model is not weighted.

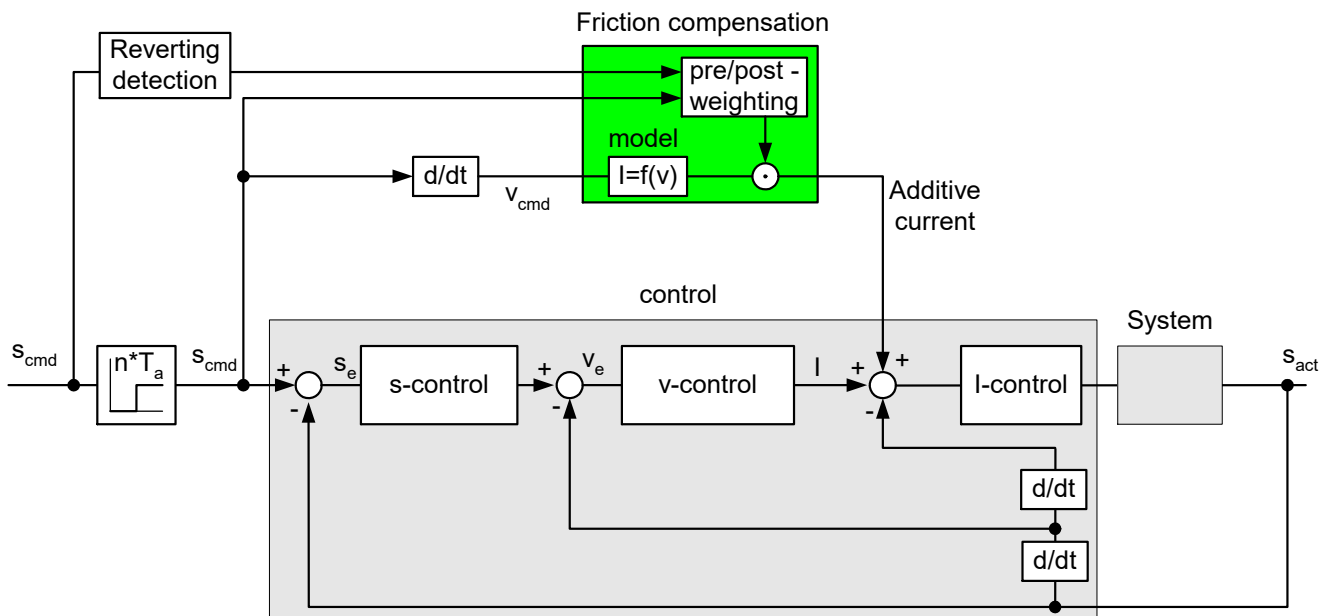


Fig. 20: Add friction compensation to the control loop of an axis

4.5.1.2 Parameterisation

Parameterise compensation values

The table for friction compensation must be programmed with ascending velocity and the velocity must be ≥ 0 . This is checked when the list is downloaded list and, if applicable, the error message P-ERR-110591 is output.

As of CNC Build V3.1.3079.06, use P-COMP-00062 [▶ 89] to define a maximum number of table entries in the compensation value list. The entries actually used are defined in P-COMP-00042.

Friction compensation parameters are defined in the compensation value list:

- Maximum number of table entries P-COMP-00062 [▶ 89] as of Build V3.1.3079.06
- Friction compensation mode P-COMP-00041
- Number of table elements P-COMP-00042
- Current build-up after direction reversal P-COMP-00043
- Current decay before direction reversal P-COMP-00044
- Scaling factor for compensation values P-COMP-00045
- Table entries for velocity P-COMP-00046
- Table entries for current P-COMP-00047



Notice

Friction compensation is only active when the mode (P-COMP-00041) is assigned a value unequal to 0 and P-AXIS-00522 is set.

Only value 3 is permitted for P-COMP-00041



Programing Example

Parameterise friction compensation

```
frict_comp.mode                3
frict_comp.table_entries      3
frict_comp.position_delay     30
frict_comp.reversal_lookahead 4
frict_comp.scaling_factor     10
frict_comp.delay_cycles       9

frict_comp.table[0].in        0
frict_comp.table[0].out       0
frict_comp.table[1].in        316
frict_comp.table[1].out       3722
frict_comp.table[2].in        333
frict_comp.table[2].out       3884
```

Parameter verification

A consistency check takes place when compensation parameters are adopted. If the parameters are not coherent, a related error message is output.

P-ERR-110591 Negative or non-ascending input values

P-ERR-110592 Unknown mode or no values specified

4.5.1.3 Select and deselect compensation

Activate/deactivate

By analogy to other compensations, compensation can be activated by a parameter in the axis list or additionally by an NC command.

Enable use/activate

Compensation can only be applied if the parameter P-AXIS-00522 is set (TRUE) in the parameter list and the compensation value list is parameterised.

Behaviour after start-up

When friction compensation is selected, it is active directly after controller start-up regardless of whether homing was executed.

Programming

In every case, compensation can also be activated or deactivated explicitly by the axis-specific COMP command in the NC program.



Attention

The COMP command is valid after program end. After activating or deactivating compensation, the operator must also explicitly deactivate or activate it at program end.

4.5.1.3.1 Programming

`<axis_name>[COMP ON | OFF FRICT]`

| | |
|--------------------------------|-------------------------------------------------------------------------------------------------------|
| <code><axis_name></code> | Name of the axis |
| COMP | Identifier to select/deselect axis-specific compensation. Must always be programmed as first keyword. |
| ON | Activates programmed compensation(s) |
| OFF | Deactivates programmed compensation(s) |
| FRICT | Keyword for friction compensation |



Programing Example

Activates and deactivates friction compensation

```
N15 X[COMP ON FRICT] ;Activates X axis
N25 Y[COMP OFF FRICT] ;Deactivates Y axis
N35 X22 Y33 Z44
N45 X[COMP OFF FRICT] ;Deactivates X axis
N55 M30 ;Program end
```

Error message

If friction compensation must be activated with the COMP command but it was not activated by the parameter P-AXIS-00522, the error message P-ERR-70495 is output.

4.5.1.4 Special features of drive parameters

Drive telegram

The drive must be fitted with a torque interface to be able to use friction compensation.

SERCOS

The additive torque setpoint must be configured in the cyclic log.

- S-0-0084 Torque feedback value
- S-0-0081 Additive torque command value

CANopen

The related PDOs (process data objects) are similarly configured with CANopen.

- 6077 Torque actual value
- 60B2 Torque offset

4.5.2 Determine the parameters for the compensation value list

4.5.2.1 Determine parameters manually

Manual determination

Each of the compensation value list parameters can be determined “manually”.

To this end, the associated current (`dig_drv.act_torque`), e.g. in the scope, must be read off during a motion at constant speed. The motor current during a motion at constant speed is mapped in the figure below. It can be seen that the current is in the opposite direction to the speed.

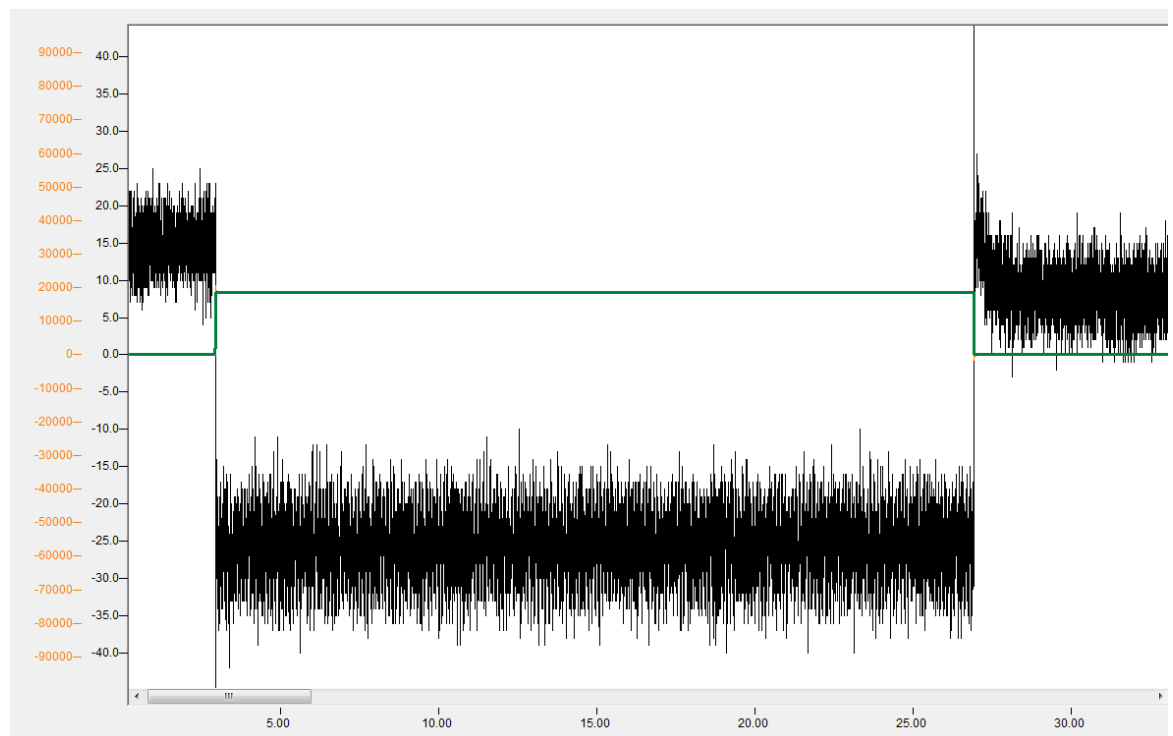


Fig. 21: Constant velocity (green) and associated current (black)

4.5.3 Effect of friction compensation

Friction compensation reduces position lag and axis backlash. This boosts accuracy. Furthermore, the speed controllers are relieved, as a result of which the dynamic parameters can be used to a greater extent without impairing the machining result.

The figure below shows the result of a circular transition test with compensation activated and deactivated. Without compensation (blue), clear peaks are visible at the quadrant transitions, which are reduced by compensation (red).

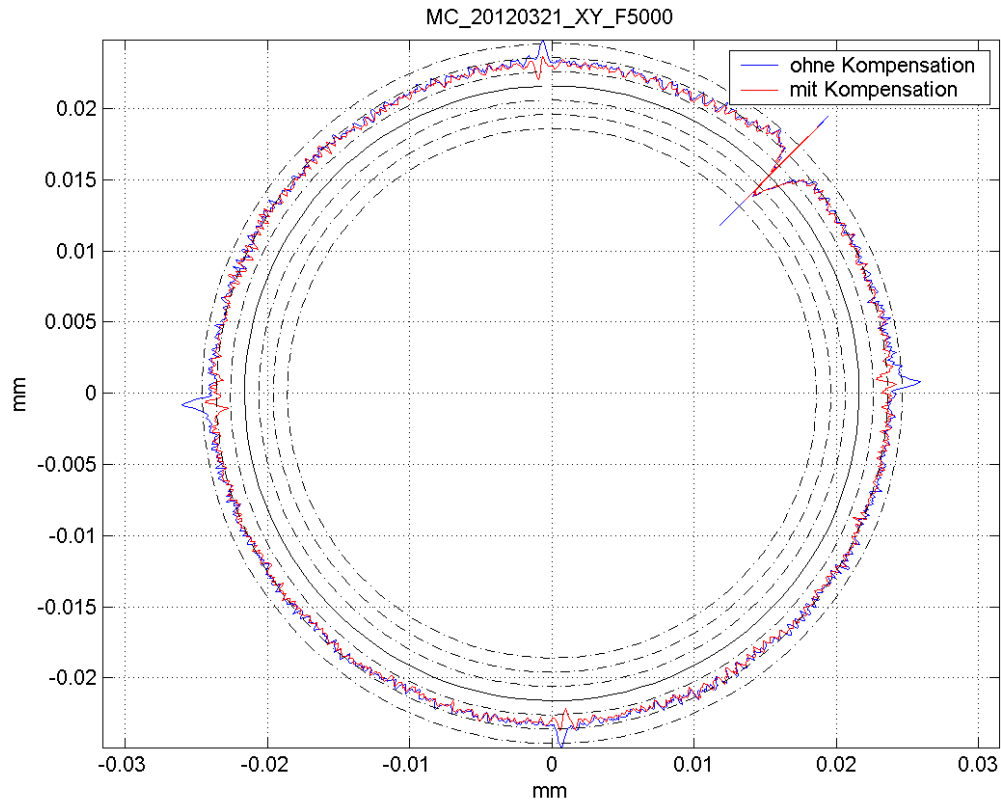


Fig. 22: Circular transition test with and without friction compensation

4.5.4 Parameter

4.5.4.1 Overview

4.5.4.1.1 Axis parameters

| ID | Parameter | Description |
|--------------|---------------------|-------------------------------------------------|
| P-AXIS-00522 | lr_param.frict_comp | Activates and deactivates friction compensation |

4.5.4.1.2 Compensation values

| ID | Parameter | Description |
|---------------------|--------------------------------------------|-----------------------------------------------------------------------------------------|
| P-COMP-00041 | Index of the incorrect interpolation point | Friction compensation mode |
| P-COMP-00042 | frict_comp.table_entries | Number of elements in the compensation value table. Maximum of 20 |
| P-COMP-00043 | frict_comp.position_delay | Distance over which the motor current is built up during start-up. |
| P-COMP-00044 | frict_comp.reversal_lookahead | Number of cycles during which the motor current is dissipated before a motion reversal. |
| P-COMP-00045 | frict_comp.scaling_factor | Scaling factor for the entries in the compensation list |
| P-COMP-00046 | frict_comp.table[i].in | Velocity |
| P-COMP-00047 | frict_comp.table[i].out | Measured friction (motor current) |
| P-COMP-00058 | frict_comp.delay_cycles | Delay in compensation values after reversal point in cycles |
| P-COMP-00062 | frict_comp.max_points | Max. number of possible table entries |

4.5.4.2 Description

4.5.4.2.1 Axis parameters

| | | |
|---------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------|
| P-AXIS-00522 | Activation of friction compensation | |
| Description | This parameter activates the friction compensation. | |
| Parameter | lr_param.frict_comp | |
| Data type | BOOLEAN | |
| Data range | 0/1 | |
| Axis types | T, R | |
| Dimension | T: ---- | R: ---- |
| Default value | 0 | |
| Drive types | SERCOS, CANopen | |
| Remarks | If friction compensation must be activated with the COMP command but it was not activated by the parameter P-AXIS-00522, the error message P-ERR-70495 is output. | |

4.5.4.2.2 Compensation values

| | | |
|---------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------|-----------|
| P-COMP-00041 | Friction compensation mode | |
| Description | The parameter defines the operation mode for friction compensation. If the parameter is assigned the value 0, friction compensation is deactivated. | |
| Parameter | frict_comp.mode | |
| Data type | UNS16 | |
| Data range | 0: Deactivate friction compensation 3: Compensation with additive current taking into account the commanded speed | |
| Axis types | T, R, S | |
| Dimension | T: ---- | R,S: ---- |
| Default value | 0 | |
| Remarks | To activate friction compensation, the mode must and P-AXIS-00522 must be set. | |

| P-COMP-00042 | Number of elements in the compensation value table | |
|---------------------|-------------------------------------------------------------------------------------------|-----------|
| Description | This parameter defines the number of entries in the compensation table. | |
| Parameter | frict_comp.table_entries | |
| Data type | UNS16 | |
| Data range | $0 \leq \text{table_entries} \leq \text{P-COMP-00062}$ [▶ 89] | |
| Axis types | T, R, S | |
| Dimension | T: ---- | R,S: ---- |
| Default value | 0 | |
| Remarks | P-COMP-00062 [▶ 89] is available as of Build V3.1.3079.06. The default upper limit is 20. | |

| P-COMP-00043 | Delay value for current build-up | |
|---------------------|------------------------------------------------------------------------------------------------------------------------------------------------|--------------|
| Description | This parameter defines the delay value for current built-up at start-up. Its purpose is to prevent abrupt changes. Current build-up is linear. | |
| Parameter | frict_comp.position_delay | |
| Data type | SGN32 | |
| Data range | $0 \leq \text{position_delay} \leq 10$ | |
| Axis types | T, R, S | |
| Dimension | T: 0.1µm | R,S: 0.0001° |
| Default value | 0 | |
| Remarks | | |

| P-COMP-00044 | Reversal look ahead | |
|---------------------|---------------------------------------------------------------------------------------------------------|-------------|
| Description | This parameter defines the number of cycles over which the motor current decays before motion reversal. | |
| Parameter | frict_comp.reversal_lookahead | |
| Data type | UNS16 | |
| Data range | $0 \leq \text{reversal_lookahead} \leq 4$ | |
| Axis types | T, R, S | |
| Dimension | T: Cycles | R,S: Cycles |
| Default value | 0 | |
| Remarks | | |

| | | |
|---------------------|----------------------------------------------------------------------------|-----------|
| P-COMP-00045 | Scaling factor for compensation values | |
| Description | This parameter defines the scaling of all compensation values in the list. | |
| Parameter | frict_comp.scaling_factor | |
| Data type | SGN16 | |
| Data range | MIN(SGN16) < scaling_factor < MAX(SGN16) | |
| Axis types | T, R, S | |
| Dimension | T: 0.1% | R,S: 0.1% |
| Default value | 1000 | |
| Remarks | | |

| | | |
|---------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------|
| P-COMP-00046 | Velocity input variable | |
| Description | This parameter defines the velocities for which the additional motor currents specified in P-COMP-00047 are to be output to the additive current interface. The values must be entered in ascending order. | |
| Parameter | frict_comp.table[i].in where i= P-COMP-00042 | |
| Data type | SGN32 | |
| Data range | 0 < table[i].in < MAX(SGN32) | |
| Axis types | T, R, S | |
| Dimension | T: [$\mu\text{m/s}$] | R,S: [$0.001^\circ/\text{s}$] |
| Default value | 0 | |
| Remarks | | |

| | | |
|---------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------|
| P-COMP-00047 | Measured friction (motor current) – output variable | |
| Description | This parameter defines the current which is to be additionally output at the additive current interface. | |
| Parameter | frict_comp.table[i].out where i= P-COMP-00042 | |
| Data type | SGN32 | |
| Data range | MIN(SGN32) < table[i].out < MAX(SGN32) | |
| Axis types | T, R, S | |
| Dimension | T: * | R,S: * |
| Default value | 0 | |
| Remarks | * The dimension of the motor current depends on the internal data of the related drive. In CANopen and SERCOS, this value corresponds to the contents of the CNC object <i>dig_drv.act_torque</i> . | |

| | | |
|---------------------|-------------------------------------------------------------------|-------------|
| P-COMP-00058 | Delay time for compensation values | |
| Description | This parameter defines the delay time of all compensation values. | |
| Parameter | frict_comp.delay_cycles | |
| Data type | SGN16 | |
| Data range | $0 \leq \text{delay_cycles} < 249$ | |
| Axis types | T, R, S | |
| Dimension | T: Cycles | R,S: Cycles |
| Default value | 0 | |
| Remarks | | |

| | | |
|---------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------|
| P-COMP-00062 | Maximum number of table entries for friction compensation | |
| Description | <p>This friction compensation parameter (FCT-C25) saves the memory space required for a particular number of table entries.</p> <p>The size of the actually used compensation table is defined by `table_entries` (P-COMP-00042) and `table_entries` must be smaller than `max_points`.</p> | |
| Parameter | frict_comp.max_points | |
| Data type | UNS32 | |
| Data range | $0 \leq \text{P-COMP-00062}$ | |
| Axis types | T, R, S | |
| Dimension | T: ---- | R,S: ---- |
| Default value | 20 | |
| Remarks | <p>The parameter value can no longer be changed after start-up or after lists are reloaded. Otherwise error ID 110641 is output.</p> <p>If P-COMP-00062 is not specified (or assigned the value 0), the default value is assigned to P-COMP-00062 for downward compatibility reasons.</p> <p>To avoid the default assignment, memory can be saved for an axis that does not use friction compensation by assigning the value 1 to P-COMP-00062.</p> <p>This parameter is available as of CNC Build V3.3079.06</p> | |

4.6 Crosstalk compensation

Crosstalk compensation is used to compensate for position errors caused by an acceleration in another axis.



Release Note

Functionality available as of CNC Build V3.1.3081.2 or V3.1.3108.4.

Compensation process

Crosstalk compensation is used to compensate an axis position depending on the acceleration of another axis.

The axis whose acceleration affects the compensation value is called the master axis. The axis for which compensation is active is called the slave axis.

A master axis can also be the slave axis of another master axis.

The axis whose position affects the compensation value is called the adaptation axis. Up to two adaptation axes can be specified.

Compensation can be configured direction-dependent.



Notice

The data for crosstalk compensation is specified in the compensation value list of the slave axis.

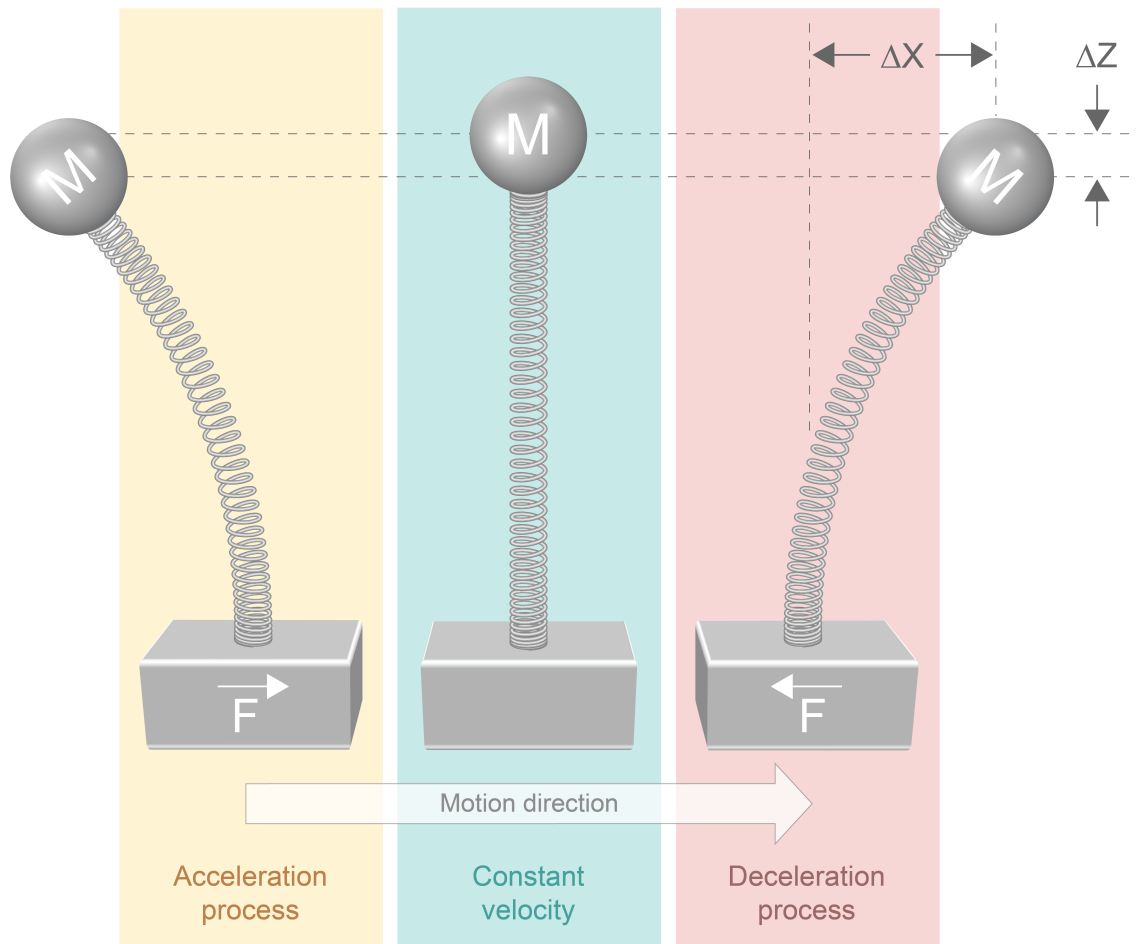


Fig. 23: Overview of crosstalk compensation

Properties

- A master axis has one or several slave axes.
- A slave has only one master axis.
- Crosstalk compensation can also be used for the master and slave axes of a gantry combination.
- A compensation value can be specified for each acceleration.
- Interpolation between accelerations is linear.
- Crosstalk compensation is available for all drive types.
- Compensations can only be viewed in the accelerations directly output to the drive (not in the normal display data) since compensation takes place outside normal calculations.

Effectiveness

Crosstalk compensation is only effective if all the following conditions are fulfilled:

- The function was activated for the slave axis.
- The compensation value list was provided.
- Master and slave axes include linear axes, rotary axes or spindles.

4.6.1 Overview

Activation

Crosstalk compensation is activated in the axis machine data record of the slave axis by P-AXIS-00789 [▶ 97] (lr_param.crosstalk).



Programming Example

Excerpt from the axis parameter list:

```
:  
lr_param.crosstalk      1  
:
```



Notice

Crosstalk compensation can also be used for a gantry axis group. A compensation value list must then be specified for each axis in the gantry combination (crosstalk compensation slave).

Compensation value lists can therefore have different settings for each gantry axis.

Activating/deactivating

Crosstalk compensation (ON if compensation is activated) can be switched on or off at any time when the slave axis is at standstill. The slave axis command positions displayed are offset with the offset values.

Filter:

These compensation values can be smoothed by using a sine-square filter. The parameter P-COMP-00064 [▶ 98] (n_cycles) switches the filter order to activate it.

Direction dependency of compensation

If position errors are dependent on the motion direction, compensation can be configured direction-dependent using the P-COMP-00084 [▶ 101] parameter.

Crosstalk compensation modes

Three modes are provided for crosstalk compensation.

Mode 1:

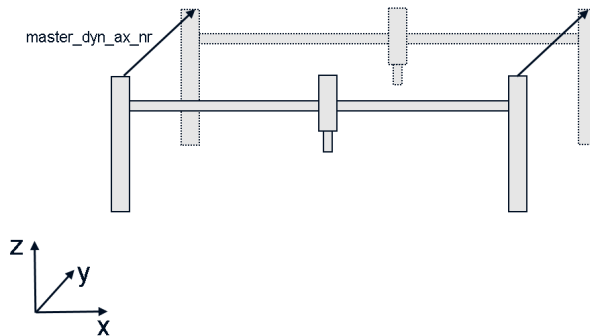


Fig. 24: Crosstalk compensation – Mode 1

An acceleration and the related compensation value are specified. With accelerations less than the specified values, the compensation value is linear interpolated.

Mode 2:

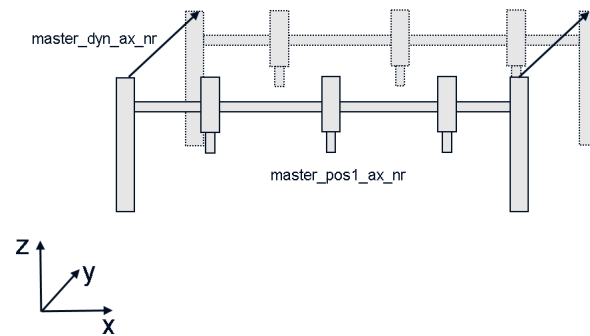


Fig. 25: Crosstalk compensation – Mode 2

Compensation is calculated using an adaptation axis which is obtained by the user conducting three measurement tests. The measurement tests are conducted at various positions on the adaptation axis. Compensation is then calculated using the position of the adaptation axis and the current acceleration.

Mode 3:

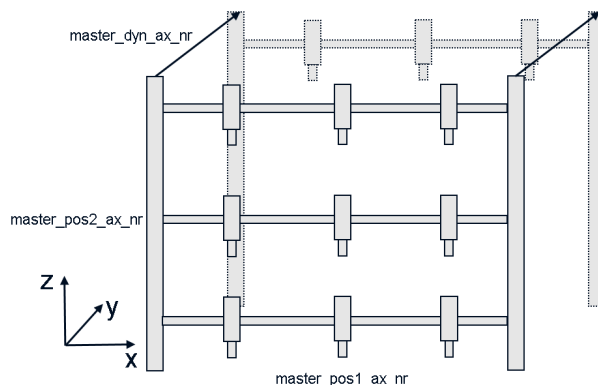


Fig. 26: Crosstalk compensation – Mode 3

Two adaptation axes can be specified. The user can enter up to 15 measurement tests in the compensation value list. Crosstalk compensation calculates compensation values using surface interpolation.

Here, please note that the measurements must cover the complete workspace. If this is not the case, incorrect compensation values can occur with positions outside the specified measuring range.

Management data of the crosstalk compensation list

General data of the list body is entered in the structure `kw.crosstalk.*`. It contains the following elements.

Management data elements

| Variable name | Type | Meaning |
|--------------------|---------|--------------------------------------------------------------------------------------------------------------------|
| mode | UNS08 | Compensation mode |
| master_dyn_ax_nr | UNS16 | Logical axis number of the master axis whose acceleration is used as the input variable of the compensation list. |
| master_pos1_ax_nr | UNS16 | Logical axis number of the first adaptation axis. |
| master_pos2_ax_nr | UNS16 | Logical axis number of second adaptation axis |
| n_cycles | UNS16 | Number of cycles of the sine-square filter. |
| manual_activation | BOOLEAN | 0: (Default) The CNC activates crosstalk compensation automatically as soon as the required preconditions are met. |
| max_points | UNS32 | Number of measurement tests in the compensation value list. |
| acceleration | SGN32 | Acceleration [mm/s ²] in case of axis excursion. |
| deceleration | SGN32 | Negative acceleration [mm/s ²] in case of axis excursion. |
| velocity_dependent | BOOLEAN | Different compensation values for different motion directions. |
| | | |

Compensation values of crosstalk compensation

The corresponding compensation value of the slave axis is entered for each acceleration in the list `kw.crosstalk.table[i].*`. The compensation list is valid for positive and negative directions of acceleration.

Compensation value list

| Variable name | Type | Meaning |
|-------------------------------------------|-------|------------------------------------------------------------------|
| position[i].ax_1 | SGN64 | Position of the first adaptation axis with acceleration test i |
| position[i].ax_2 | SGN64 | Position of the second adaptation axis with acceleration test i |
| position[i].correction_accelerate_dir_pos | SGN64 | Compensation value for acceleration in positive motion direction |
| position[i].correction_decelerate_dir_pos | SGN64 | Compensation value for deceleration in positive motion direction |

| | | |
|-------------------------------------------|-------|------------------------------------------------------------------|
| position[i].correction_accelerate_dir_neg | SGN64 | Compensation value for acceleration in negative motion direction |
| position[i].correction_decelerate_dir_neg | SGN64 | Compensation value for deceleration in negative motion direction |

4.6.2 Parameter

4.6.2.1 Overview

| ID | Parameter | Description |
|--------------|--------------------|---------------------------------|
| P-AXIS-00789 | lr_param.crosstalk | Activate crosstalk compensation |

| ID | Parameter | Description |
|--------------|--------------------------------------------------------|------------------------------------------------------------------|
| P-COMP-00063 | kw.crosstalk.master_ax_nr | Logical axis number of the master axis |
| P-COMP-00064 | kw.crosstalk.n_cycles | Number of cycles for 'smooth switching' |
| P-COMP-00065 | kw.crosstalk.last_index | Last index of compensation value list |
| P-COMP-00066 | kw.crosstalk.table[i].acceleration | Accelerations of the master axis |
| P-COMP-00067 | kw.crosstalk.table[i].correction | Compensation values for the slave axis |
| P-COMP-00080 | kw.crosstalk.master_pos1_ax_nr | Logical axis number of the first adaptation axis |
| P-COMP-00081 | kw.crosstalk.master_pos2_ax_nr | Logical axis number of the second adaptation axis |
| P-COMP-00082 | kw.crosstalk.mode | Crosstalk compensation mode |
| P-COMP-00083 | kw.crosstalk.max_points | Number of measurement tests in the compensation value list |
| P-COMP-00084 | kw.crosstalk.velocity_dependent | Different compensation values for different motion directions |
| P-COMP-00085 | kw.crosstalk.position[i].ax_1 | Position of the first adaptation axis with acceleration test i |
| P-COMP-00086 | kw.crosstalk.position[i].ax_2 | Position of the second adaptation axis with acceleration test i |
| P-COMP-00087 | kw.crosstalk.position[i].correction_accelerate_dir_pos | Compensation value for acceleration in positive motion direction |
| P-COMP-00088 | kw.crosstalk.position[i].correction_accelerate_dir_neg | Compensation value for acceleration in negative motion direction |
| P-COMP-00089 | kw.crosstalk.position[i].correction_decelerate_dir_pos | Compensation value for deceleration in positive motion direction |
| P-COMP-00090 | kw.crosstalk.position[i].correction_decelerate_dir_neg | Compensation value for deceleration in negative motion direction |

4.6.2.2 Description

Axis parameter

| | | |
|---------------------|---------------------------------------------------------------|--|
| P-AXIS-00789 | Activate crosstalk compensation | |
| Description | This parameter activates the crosstalk compensation function. | |
| Parameter | lr_param.crosstalk | |
| Data type | BOOLEAN | |
| Data range | 0/1 | |
| Axis types | T | |
| Dimension | T: ---- | |
| Default value | 0 | |
| Drive types | | |
| Remarks | Parameter available as of CNC Build V3.1.3079.32 and higher | |

Compensation parameters

| P-COMP-00063 | Logical axis number of the master axis | |
|---------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------|
| Description | This parameter determines the logical number of the master axis whose acceleration is used as the input variable of the compensation value list of the slave axis. | |
| Parameter | kw.crosstalk.master_dyn_ax_nr | |
| Data type | UNS16 | |
| Data range | $1 \leq \text{P-COMP-00063} \leq \text{MAX (UNS16)}$ | |
| Axis types | T | |
| Dimension | T: ---- | R,S: - |
| Default value | 0 | |
| Remarks | Parameter available as of CNC Build V3.1.3081.2 or V3.1.3108.4. | |

| P-COMP-00064 | Number of cycles for 'smooth switching' | |
|---------------------|----------------------------------------------------------------------------------------------------------------|---------|
| Description | This parameter determines the number of cycles for which crosstalk compensation is coupled/decoupled softly. | |
| Parameter | kw.crosstalk.n_cycles | |
| Data type | UNS16 | |
| Data range | $0 \leq \text{P-COMP-00064} \leq 20$ (maximum number of cycles above which coupling or decoupling is to occur) | |
| Axis types | T, R, S | |
| Dimension | T: ---- | R, S: - |
| Default value | 0 | |
| Remarks | Parameter available as of CNC Build V3.1.3079.32 | |

| P-COMP-00066 | Accelerations of the master axis | |
|---------------------|--------------------------------------------------------------------------------------------------------|--------|
| Description | This parameter defines the acceleration of the master axis requiring a compensation of the slave axis. | |
| Parameter | kw.crosstalk.acceleration | |
| Data type | SGN32 | |
| Data range | $0 < \text{P-COMP-00066} < \text{MAX(SGN32)}$ | |
| Axis types | T | |
| Dimension | T: [mm/s ²] | R,S: - |
| Default value | 0 | |
| Remarks | Parameter available as of V3.1.3081.2 and V3.1.3108.4 | |

| | | |
|---------------------|--------------------------------------------------------------------------------------------------------|--------|
| P-COMP-00067 | Negative acceleration of the master axis | |
| Description | This parameter defines the acceleration of the master axis requiring a compensation of the slave axis. | |
| Parameter | kw.crosstalk.acceleration | |
| Data type | SGN32 | |
| Data range | MIN(SGN32) ≤ P-COMP-00067 < 0 | |
| Axis types | T | |
| Dimension | T: [mm/s ²] | R,S: - |
| Default value | 0 | |
| Remarks | Parameter available as of V3.1.3081.2 and V3.1.3108.4 | |

| | | |
|---------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------|
| P-COMP-00065 | Manual activation of crosstalk compensation | |
| Description | <p>The CNC activates crosstalk compensation automatically if it is selected in the axis parameters (P-AXIS-00789 [▶ 97]) and the required preconditions are met.</p> <p>If the parameter P-COMP-00065 is set to 1, crosstalk compensation must be explicitly activated by an NC command. [PROG// Selecting/deselecting axis compensations in the NC program (COMP)]</p> <p>Compensation is deactivated at the end of the NC program, when the CNC is reset or when the compensating axis is released.</p> | |
| Parameter | kw.crosstalk.manual_activation | |
| Data type | BOOLEAN | |
| Data range | 0: Automatic activation 1: Explicit activation in NC program | |
| Axis types | T | |
| Dimension | T: ---- | R, S: - |
| Default value | 0 | |
| Remarks | Parameter available as of CNC Build V3.1.3081.2 or V3.1.3108.4. | |

| | | |
|---------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------|
| P-COMP-00080 | Logical axis number of the first adaptation axis | |
| Description | This parameter defines the logical axis number of the first adaptation axis. The position of the adaptation axis influences compensation in Modes 2 and 3 (P-COMP-00082 [▶ 100]). | |
| Parameter | kw.crosstalk.master_pos1_ax_nr | |
| Data type | UNS16 | |
| Data range | 0 < P-COMP-00080 < MAX(UNS16) | |
| Axis types | T | |
| Dimension | T: ---- | R, S: - |
| Default value | 0 | |
| Remarks | Parameter available as of V3.1.3081.2 and V3.1.3108.4 | |

| | | |
|---------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------|
| P-COMP-00081 | Logical axis number of the second adaptation axis | |
| Description | This parameter defines the logical axis number of the second adaptation axis. The position of the adaptation axis influences compensation in Mode 3 (P-COMP-00082 [▶ 100]). | |
| Parameter | kw.crosstalk.master_pos2_ax_nr | |
| Data type | UNS16 | |
| Data range | 0 < P-COMP-00081 < MAX(UNS16) | |
| Axis types | T | |
| Dimension | T: ---- | R, S: - |
| Default value | 0 | |
| Remarks | Parameter available as of V3.1.3081.2 and V3.1.3108.4 | |

| | | |
|---------------------|-------------------------------------------------------|---------|
| P-COMP-00082 | Crosstalk compensation mode | |
| Description | This parameter specifies the compensation mode. | |
| Parameter | kw.crosstalk.mode | |
| Data type | UNS08 | |
| Data range | 1 ...3 | |
| Axis types | T | |
| Dimension | T: ---- | R, S: - |
| Default value | 1 | |
| Remarks | Parameter available as of V3.1.3081.2 and V3.1.3108.4 | |

| P-COMP-00083 | Number of measurement tests in the compensation value list | |
|---------------------|-----------------------------------------------------------------------------------------------|---------|
| Description | This parameter sets the number of measurement tests specified in the compensation value list. | |
| Parameter | kw.crosstalk.max_points | |
| Data type | UNS32 | |
| Data range | $0 \leq \text{P-COMP-00083} < 15$ | |
| Axis types | T | |
| Dimension | T: ---- | R, S: - |
| Default value | 0 | |
| Remarks | Parameter available as of V3.1.3081.2 and V3.1.3108.4 | |

| P-COMP-00084 | Different compensation values for different motion directions | |
|---------------------|-----------------------------------------------------------------------------------------------------------------------|---------|
| Description | This parameter sets whether a compensation should use difference compensation values for different motion directions. | |
| Parameter | kw.crosstalk.velocity_dependent | |
| Data type | BOOLEAN | |
| Data range | 0 / 1 | |
| Axis types | T | |
| Dimension | T: ---- | R, S: - |
| Default value | 0 | |
| Remarks | Parameter available as of V3.1.3081.2 and V3.1.3108.4 | |

| P-COMP-00085 | Position of the first adaptation axis with acceleration test | |
|---------------------|---------------------------------------------------------------------------------------------------|---------|
| Description | This parameter specifies the position of the first adaptation axis for the ith acceleration test. | |
| Parameter | kw.crosstalk.position[i].ax_1 | |
| Data type | SGN64 | |
| Data range | $\text{MIN}(\text{SGN64}) \leq \text{P-COMP-00085} < \text{MAX}(\text{SGN64})$ | |
| Axis types | T | |
| Dimension | T: [0.1 μm] | R, S: - |
| Default value | 0 | |
| Remarks | Parameter available as of V3.1.3081.2 and V3.1.3108.4 | |

| P-COMP-00086 | Position of the second adaptation axis with acceleration test | |
|---------------------|----------------------------------------------------------------------------------------------------|---------|
| Description | This parameter specifies the position of the second adaptation axis for the ith acceleration test. | |
| Parameter | kw.crosstalk.position[i].ax_2 | |
| Data type | SGN64 | |
| Data range | MIN(SGN64) ≤ P-COMP-00086 < MAX(SGN64) | |
| Axis types | T | |
| Dimension | T: [0.1 μm] | R, S: - |
| Default value | 0 | |
| Remarks | Parameter available as of V3.1.3081.2 and V3.1.3108.4 | |

| P-COMP-00087 | Compensation value for acceleration in positive motion direction | |
|---------------------|---------------------------------------------------------------------------------|---------|
| Description | Compensation value at position i for acceleration in positive motion direction. | |
| Parameter | kw.crosstalk.position[i].correction_accelerate_dir_pos | |
| Data type | SGN64 | |
| Data range | MIN(SGN64) ≤ P-COMP-00087 < MAX(SGN64) | |
| Axis types | T | |
| Dimension | T: [0.1 μm] | R, S: - |
| Default value | 0 | |
| Remarks | Parameter available as of V3.1.3081.2 and V3.1.3108.4 | |

| P-COMP-00088 | Compensation value for acceleration in negative motion direction | |
|---------------------|------------------------------------------------------------------------------------------------------------------------------|---------|
| Description | Compensation value at position i for acceleration in negative motion direction. | |
| Parameter | kw.crosstalk.position[i].correction_accelerate_dir_neg | |
| Data type | SGN64 | |
| Data range | MIN(SGN64) ≤ P-COMP-00088 < MAX(SGN64) | |
| Axis types | T | |
| Dimension | T: [0.1 μm] | R, S: - |
| Default value | 0 | |
| Remarks | Parameter available as of V3.1.3081.2 and V3.1.3108.4 This parameter is only active if P-COMP-00084 [▶ 101] is activated. | |

| | | | |
|---------------------|---------------------------------------------------------------------------------|---------|--|
| P-COMP-00089 | Compensation value for deceleration in positive motion direction | | |
| Description | Compensation value at position i for deceleration in positive motion direction. | | |
| Parameter | kw.crosstalk.position[i].correction_decelerate_dir_pos | | |
| Data type | This parameter is only active if P-COMP-00084 is activated. | | |
| Data range | MIN(SGN64) ≤ P-COMP-00089 < MAX(SGN64) | | |
| Axis types | T | | |
| Dimension | T: [0.1 μm] | R, S: - | |
| Default value | 0 | | |
| Remarks | Parameter available as of V3.1.3081.2 and V3.1.3108.4 | | |

| | | | |
|---------------------|------------------------------------------------------------------------------------------------------------------------------|---------|--|
| P-COMP-00090 | Compensation value for deceleration in negative motion direction | | |
| Description | Compensation value at position i for deceleration in negative motion direction. | | |
| Parameter | kw.crosstalk.position[i].correction_decelerate_dir_neg | | |
| Data type | SGN64 | | |
| Data range | MIN(SGN64) ≤ P-COMP-00090 < MAX(SGN64) | | |
| Axis types | T | | |
| Dimension | T: [0.1 μm] | R, S: - | |
| Default value | 0 | | |
| Remarks | Parameter available as of V3.1.3081.2 and V3.1.3108.4 This parameter is only active if P-COMP-00084 [▶ 101] is activated. | | |

4.6.2.3 CNC objects

| | | | |
|--------------------|----------------------------------------------------------------------------------------|---------------------|--------------------------|
| Name | CROSSTALK::activated | | |
| Description | This object reads whether crosstalk compensation is activated by P-AXIS-00789 [▶ 97] . | | |
| Task | GEO (Port 551) | | |
| Index group | 0x120300 | Index offset | 0x<A _{ID} >01F4 |
| Data type | BOOLEAN | Length | 1 |
| Attributes | read | Unit | [-] |
| Remarks | Available as of CNC Build V3.1.3079.32 | | |

| | | | |
|--------------------|---------------------------------------------------------------------------|---------------------|--------------------------|
| Name | CROSSTALK::actual_offset | | |
| Description | This object reads the current effective offset of crosstalk compensation. | | |
| Task | GEO (Port 551) | | |
| Index group | 0x120300 | Index offset | 0x<A _{ID} >01F7 |
| Data type | SGN32 | Length | 4 |
| Attributes | read | Unit | [Incr.] |
| Remarks | Available as of CNC Build V3.1.3079.32 | | |

| | | | |
|--------------------|-------------------------------------------------------------------------------------------------|---------------------|--------------------------|
| Name | CROSSTALK::delta_offset | | |
| Description | This object reads the change in compensation value in the current crosstalk compensation cycle. | | |
| Task | GEO (Port 551) | | |
| Index group | 0x120300 | Index offset | 0x<A _{ID} >01F6 |
| Data type | SGN32 | Length | 4 |
| Attributes | read | Unit | [Incr.] |
| Remarks | Available as of CNC Build V3.1.3079.32 | | |

| | | | |
|--------------------|-------------------------------------------------------------------------------------------------------------|---------------------|--------------------------|
| Name | CROSSTALK::end_offset | | |
| Description | This object reads the compensation value of crosstalk compensation at the current position without filters. | | |
| Task | GEO (Port 551) | | |
| Index group | 0x120300 | Index offset | 0x<A _{ID} >01F8 |
| Data type | SGN32 | Length | 4 |
| Attributes | read | Unit | [Incr.] |
| Remarks | Available as of CNC Build V3.1.3079.32 | | |

4.6.3 Example of a compensation value list



Example

Crosstalk compensation with Mode 1

```
# *****
# Axis compensation data for Z axis
# *****

kopf.achs_nr           3
kopf.log_achs_name     Z
```



```
kw.crosstalk.mode                1

kw.crosstalk.master_dyn_ax_nr      1 /*Logical axis number of the master
axis */
kw.crosstalk.velocity_dependent     TRUE
#
kw.crosstalk.acceleration           10000 ( mm/s^2)
kw.crosstalk.deceleration           -10000 ( mm/s^2)
kw.crosstalk.position[0].correction_accelerate_dir_pos  25 (0.1 um)
Kw.crosstalk.position[0].correction_decelerate_dir_pos  25
Kw.crosstalk.position[0].correction_accelerate_dir_neg  50
kw.crosstalk.position[0].correction_decelerate_dir_neg  50
```



Example

Crosstalk compensation with Mode 2

```
# *****
# Axis compensation data for Z axis
# *****

kopf.achs_nr                3
kopf.log_achs_name          Z
kw.crosstalk.mode          2

kw.crosstalk.master_dyn_ax_nr  1 /*Logical axis number of the master
axis */
kw.crosstalk.velocity_dependent  TRUE
#
kw.crosstalk.acceleration      1000 ( mm/s^2 )
kw.crosstalk.deceleration      -1000 ( mm/s^2 )
kw.crosstalk.position[0].ax_1   0    (0.1 um )
kw.crosstalk.position[0].correction_accelerate_dir_pos  50 (0.1 um)
Kw.crosstalk.position[0].correction_decelerate_dir_pos  50
Kw.crosstalk.position[0].correction_accelerate_dir_neg  60
kw.crosstalk.position[0].correction_decelerate_dir_neg  60
kw.crosstalk.position[1].ax_1   1000 (0.1 um)
kw.crosstalk.position[1].correction_accelerate_dir_pos  70 (0.1 um)
Kw.crosstalk.position[1].correction_decelerate_dir_pos  70
Kw.crosstalk.position[1].correction_accelerate_dir_neg  80
kw.crosstalk.position[1].correction_decelerate_dir_neg  80
kw.crosstalk.position[2].ax_1   2000 ( 0.1 um)
kw.crosstalk.position[2].correction_accelerate_dir_pos  50 (0.1 um)
kw.crosstalk.position[2].correction_decelerate_dir_pos  50
Kw.crosstalk.position[2].correction_accelerate_dir_neg  60
kw.crosstalk.position[2].correction_decelerate_dir_neg  60
```



Example

Crosstalk compensation with Mode 3 with 9 measuring points

```
# *****
# Axis compensation data for Z axis
# *****

kopf.achs_nr           3
kopf.log_achs_name     Z
kw.crosstalk.mode    3

kw.crosstalk.master_dyn_ax_nr      2 ( Logical axis number of the master
axis )

kw.crosstalk.master_pos1_ax_nr 1 ( Logical axis number of the first ad-
aptation axis )
kw.crosstalk.master_pos2_ax_nr      3 ( Logical axis number of the
second adaptation axis )
kw.crosstalk.max_points              9 ( Number of measuring points)
kw.crosstalk.velocity_dependent     TRUE
#
kw.crosstalk.acceleration_pos       1000 ( mm/s^2 )
kw.crosstalk.acceleration_neg      -1000 ( mm/s^2 )
kw.crosstalk.position[0].ax_1       0    ( 0.1 um)
kw.crosstalk.position[0].ax_2       0    ( 0.1 um)
kw.crosstalk.position[0].acc_pos_vel_pos_correction 60 ( 0.1 um )
kw.crosstalk.position[0].acc_pos_vel_neg_correction 60
kw.crosstalk.position[0].acc_neg_vel_pos_correction 70
kw.crosstalk.position[0].acc_neg_vel_neg_correction 70
#...

#...
kw.crosstalk.position[8].ax_1       3000 ( 0.1 um )
kw.crosstalk.position[8].ax_2       3000 ( 0.1 um )
kw.crosstalk.position[8].acc_pos_vel_pos_correction 50 ( 0.1 um )
kw.crosstalk.position[8].acc_pos_vel_neg_correction 50
kw.crosstalk.position[8].acc_neg_vel_pos_correction 60
kw.crosstalk.position[8].acc_neg_vel_neg_correction 60
```

4.6.4 Error messages

Errors in the configuration of crosstalk compensation result in deactivation of the function for the affected axis and to the output of an error message or warning message.

Overview of error messages:

- ID 70622
- ID 70625
- ID 70626
- ID 70627
- ID 70629
- ID 70631
- ID 70632
- ID 70657
- ID 70658
- ID 70659
- ID 70660

5 Other configuration options for axis compensation

5.1 Selecting/deselecting axis compensation in the NC program



Notice

Axis compensations switched off by the COMP command has a global NC program effect, i.e. compensations are not automatically activated at program end. They must be switched back on explicitly using the COMP command in the subsequent NC program.

Syntax:

```
<axis_name> [ COMP [ [ ON | OFF [ BACKLASH CROSS PLANE LEAD TEMP FRICT CROSSTALK ] ] |
OFF_ALL ]
[ NO_MOVE ] { \ } ]
```

| | |
|-------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <axis_name> | Name of the axis |
| COMP | Identifier to select/deselect axis-specific compensation. Must always be programmed as the <u>first</u> keyword. |
| ON | Activates programmed compensation(s) |
| OFF | Deactivates programmed compensation(s) |
| BACKLASH | Keyword for backlash compensation [as of Build V3.1.3081.05] |
| CROSS | Keyword for cross compensation |
| PLANE | Keyword for plane compensation |
| LEAD | Keyword for spindle leadscrew error compensation |
| TEMP | Keyword for temperature compensation |
| FRICT | Keyword for friction compensation [as of Build V2.11.2022.05] |
| CROSSTALK | Keyword for crosstalk compensation [as of Build V3.1.3079.32] |
| OFF_ALL | Switch off all active compensations. No further compensation keywords may be programmed after the keyword. |
| NO_MOVE | By default the position offset occurring when axis compensations are switched on/off is executed before NC program processing is continued. The keyword NO_MOVE suppresses this motion. The channel is initialised with the changed axis position. The position offset is only executed at the next axis motion programmed in the NC program. |
| \ | Separator ("backslash") for clear programming of the command over multiple lines. |



Programming Example

Axis-specific programming

```
;Deactivate cross and plane compensation in the X axis
N10 X[COMP OFF CROSS PLANE]
;Compensation programming of multiple axes in an NC block
N50 X[COMP OFF CROSS] Y[COMP ON LEAD TEMP]
;Deactivate all compensations in the Z axis
N100 Z[COMP OFF_ALL]
;Deactivate all compensations of the Y axis without axis motion
N200 Y[COMP OFF_ALL NO_MOVE]
```

5.2 Checking the states of axis compensation in the NC program

V.A variables

The following V.A. variables can be used to check from the NC program whether a compensation programmable via the COMP command is initialised or already active for a specific axis and the value of the compensation..



Notice

Read access to the variables with the identifier L_{Flush} causes flushing of the NC channel.

For example, flushing the NC channel can result in the error ID 20651 if tool radius compensation (G41/G42) is active.

Check for initialisation

| | | | | |
|-----------------------|------------------------------------------------------------------------|---------|-------|-------------|
| CROSS_COMP_INIT.X | Is cross compensation initialised for the axis? If yes, then 1 | Boolean | 0 , 1 | L_{Flush} |
| PLANE_COMP_INIT.X | Is plane compensation initialised for the axis? If yes, then 1 | Boolean | 0 , 1 | L_{Flush} |
| LEAD_COMP_INIT.X | Is leadscrew error compensation activated for the axis? If yes, then 1 | Boolean | 0 , 1 | L_{Flush} |
| TEMP_COMP_INIT.X | Is temperature compensation initialised for the axis? If yes, then 1 | Boolean | 0 , 1 | L_{Flush} |
| FRICT_COMP_INIT.X | Is friction compensation initialised for the axis? If yes, then 1 | Boolean | 0, 1 | L_{Flush} |
| CROSSTALK_COMP_INIT.X | Is crosstalk compensation initialised for the axis? If yes, then 1 | Boolean | 0, 1 | L_{Flush} |

Check for activation

| | | | | |
|-------------------------|--------------------------------------------------------------------------------------------|---------|-------|--------------------|
| CROSS_COMP_ACTIVE.X | Is cross compensation active for the axis? If yes, then 1 | Boolean | 0 , 1 | L _{Flush} |
| PLANE_COMP_ACTIVE.X | Is plane compensation active for the axis? If yes, then 1 | Boolean | 0 , 1 | L _{Flush} |
| LEAD_COMP_ACTIVE.X | Is leadscrew error compensation active for the axis? If yes, then 1 | Boolean | 0 , 1 | L _{Flush} |
| TEMP_COMP_ACTIVE.X | Is temperature compensation active for the axis? If yes, then 1 | Boolean | 0 , 1 | L _{Flush} |
| FRICT_COMP_ACTIVE.X | Is friction compensation active for the axis? If yes, then 1 | Boolean | 0, 1 | L _{Flush} |
| CROSSTALK_COMP_ACTIVE.X | Is crosstalk compensation active for the axis? If yes, then 1 | Boolean | 0, 1 | L _{Flush} |
| BACK-LASH_COMP_ACTIVE.X | Is backlash compensation active for the axis? If so, then 1 [as of V3.1.3081.05] | Boolean | 0, 1 | L _{Flush} |

Read current compensation values:

| As of CNC Build V2.11.2810 the following V.A. variables of the current compensation values are available. | | | | |
|------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------|------|------------|--------------------|
| LEAD_COMP_CURR.X | Current compensation value of LSEC for the axis | Real | [mm, inch] | L _{Flush} |
| CROSS_COMP_CURR.X | Current compensation value of cross compensation for the axis | Real | [mm, inch] | L _{Flush} |
| PLANE_COMP_CURR.X | Current compensation value of plane compensation for the axis | Real | [mm, inch] | L _{Flush} |
| TEMP_COMP_CURR.X | Current compensation value of temperature compensation for the axis | Real | [mm, inch] | L _{Flush} |
| FRICT_COMP_CURR.X | Current compensation value of friction compensation for the axis | Real | [mm, inch] | L _{Flush} |
| CROSSTALK_COMP_CURR.X | Current compensation value of crosstalk compensation for the axis | Real | [mm, inch] | L _{Flush} |
| BACK-LASH_COMP_CURR.X | Current compensation value of backlash compensation for the axis [as of V3.1.3081.05] | Real | [mm, inch] | L _{Flush} |


Programing Example
Check the states of the axis compensation

```

N010 G74 X1 Y2 Z3
N020 $IF V.A.CROSS_COMP_INIT.X != TRUE
N030 #MSG ["Cross_Comp for X not init."]
N040 $ENDIF
N050 $IF V.A.TEMP_COMP_INIT.X != TRUE
N060 #MSG ["Temp_Comp for X not init."]
N070 $ENDIF
N080 X [ COMP ON CROSS TEMP ]
N090 $IF V.A.CROSS_COMP_ACTIVE[0] != TRUE
N100 #MSG ["Cross_Comp for X not active"]
N110 $ENDIF
N120 $IF V.A.TEMP_COMP_ACTIVE[0] != TRUE
N130 #MSG ["Temp_Comp for X not active"]
N140 $ENDIF
N150 ...
    
```

5.3 Monitoring of effectiveness of axis compensations in automatic mode

Some axis compensations must fulfil certain preconditions before they can be active. To ensure that the selected axis compensations are operative in automatic mode, the required compensations for processing the NC program can be specified bit-encoded in the parameter 'lr_param.prog_movement_requires_compensations' (see P-AXIS-00465).

The CNC then outputs the error message P-ERR-70435 if the axis is moved in automatic mode and the specified axis compensations are not active. However, in manual mode or during homing [FCT-M1//Description], the axis can be moved without compensations.

For example, this monitoring function may be practical to prevent the production of an inaccurate workpiece if there are errors in the compensation table.

Prerequisites

The following conditions exist for the effectiveness of axis compensations:

1. The compensation table may contain no errors, see [COMP].
2. The axis must be referenced for spindle leadscrew error compensation and temperature compensation.
3. The master axes must be referenced for cross and plane compensation..
4. The drive releases must be set for cross and plane compensation before NC program start.

Activating the monitoring function in the axis parameter list

| Variable name | Type | Meaning |
|-----------------------------------------------|-------|---------------------------------------------------------|
| lr_param.prog_movement_requires_compensations | UNS32 | Bit-encoded specification of the required compensations |



Notice

The CNC only generates error messages for compensations which are also enabled in the axis parameter list.

Bit encoding

The table below contains the bit encoding for axis compensations. The bit identifier can also be used to specify the required compensations:

| Bit | Identifier | Axis compensation |
|------|------------|------------------------------|
| 0x1 | BACKLASH | Backlash compensation |
| 0x2 | LEAD | Leadscrew error compensation |
| 0x4 | TEMP | Temperature compensation |
| 0x8 | CROSS | Cross compensation |
| 0x10 | PLANE | Plane compensation |



Example

Monitoring the effectiveness of axis compensations in automatic mode

The following entry is required in the axis parameter list to monitor spindle leadscrew error compensation and cross compensation:

lr_param.prog_movement_requires_compensations LEAD | CROSS

The two compensations must be selected so that the CNC outputs an error message in automatic mode when the conditions are no longer met.

```
lr_param.ssfk          1
lr_param.crosscomp     1
```


6 Appendix

6.1 Suggestions, corrections and the latest documentation

Did you find any errors? Do you have any suggestions or constructive criticism? Then please contact us at documentation@isg-stuttgart.de. The latest documentation is posted in our Online Help (DE/EN):



QR code link: <https://www.isg-stuttgart.de/documentation-kernel/>

The link above forwards you to:

<https://www.isg-stuttgart.de/fileadmin/kernel/kernel-html/index.html>



Notice

Change options for favourite links in your browser;

Technical changes to the website layout concerning folder paths or a change in the HTML framework and therefore the link structure cannot be excluded.

We recommend you to save the above "QR code link" as your primary favourite link.

PDFs for download:

DE:

<https://www.isg-stuttgart.de/produkte/softwareprodukte/isg-kernel/dokumente-und-downloads>

EN:

<https://www.isg-stuttgart.de/en/products/softwareproducts/isg-kernel/documents-and-downloads>

E-Mail: documentation@isg-stuttgart.de

Keyword index

| | |
|-----------------------------|-----|
| B | |
| <hr/> | |
| Backlash compensation | 10 |
| backlash | |
| Compensation | 10 |
| mechanical | 9 |
| negative | 10 |
| positive | 9 |
| | |
| M | |
| <hr/> | |
| Mechanical backlash | 9 |
| | |
| N | |
| <hr/> | |
| Negative backlash | 10 |
| | |
| P | |
| <hr/> | |
| P-AXIS-00021 | 11 |
| P-AXIS-00047 | 34 |
| P-AXIS-00103 | 11 |
| P-AXIS-00174 | 47 |
| P-AXIS-00175 | 63 |
| P-AXIS-00243 | 63 |
| P-AXIS-00271 | 20 |
| P-AXIS-00272 | 21 |
| P-AXIS-00273 | 21 |
| P-AXIS-00274 | 21 |
| P-AXIS-00275 | 22 |
| P-AXIS-00482 | 22 |
| P-AXIS-00522 | 86 |
| P-AXIS-00789 | 97 |
| P-COMP-00003 | 35 |
| P-COMP-00004 | 35 |
| P-COMP-00005 | 35 |
| P-COMP-00006 | 37 |
| P-COMP-00007 | 37 |
| P-COMP-00008 | 49 |
| P-COMP-00009 | 49 |
| P-COMP-00010 | 49 |
| P-COMP-00011 | 50 |
| P-COMP-00012 | 50 |
| P-COMP-00013 | 50 |
| P-COMP-00014 | 51 |
| P-COMP-00015 | 51 |
| P-COMP-00016 | 51 |
| P-COMP-00017 | 64 |
| P-COMP-00018 | 65 |
| P-COMP-00019 | 65 |
| P-COMP-00020 | 65 |
| P-COMP-00021 | 66 |
| P-COMP-00022 | 66 |
| P-COMP-00023 | 66 |
| P-COMP-00024 | 67 |
| P-COMP-00025 | 67 |
| P-COMP-00026 | 36 |
| P-COMP-00027 | 52 |
| P-COMP-00028 | 67 |
| P-COMP-00029 | 36 |
| P-COMP-00030 | 52 |
| P-COMP-00032 | 53 |
| P-COMP-00033 | 53 |
| P-COMP-00041 | 86 |
| P-COMP-00042 | 87 |
| P-COMP-00043 | 87 |
| P-COMP-00044 | 87 |
| P-COMP-00045 | 88 |
| P-COMP-00046 | 88 |
| P-COMP-00047 | 88 |
| P-COMP-00057 | 68 |
| P-COMP-00058 | 89 |
| P-COMP-00059 | 64 |
| P-COMP-00060 | 34 |
| P-COMP-00061 | 48 |
| P-COMP-00062 | 89 |
| P-COMP-00063 | 98 |
| P-COMP-00064 | 98 |
| P-COMP-00065 | 99 |
| P-COMP-00066 | 98 |
| P-COMP-00067 | 99 |
| P-COMP-00080 | 100 |
| P-COMP-00081 | 100 |
| P-COMP-00082 | 100 |
| P-COMP-00083 | 101 |
| P-COMP-00084 | 101 |
| P-COMP-00085 | 101 |
| P-COMP-00086 | 102 |
| P-COMP-00087 | 102 |
| P-COMP-00088 | 102 |
| P-COMP-00089 | 103 |
| P-COMP-00090 | 103 |
| Positive backlash | 9 |



© Copyright
ISG Industrielle Steuerungstechnik GmbH
STEP, Gropiusplatz 10
D-70563 Stuttgart
All rights reserved
www.isg-stuttgart.de
support@isg-stuttgart.de

